

83874

# OWNER'S Manual

---

SERIES NP-80D

## LIQUID-COOLED RECREATIONAL VEHICLE GENERATOR

Model 9344-1

**GENERAC**  
C O R P O R A T I O N

# GENERAL SAFETY RULES

THE MANUFACTURER SUGGESTS THAT THESE "RULES" FOR SAFE OPERATION BE COPIED AND POSTED IN POTENTIAL HAZARD AREAS OF THE RECREATIONAL VEHICLE. SAFETY SHOULD BE STRESSED TO ALL OPERATORS AND POTENTIAL OPERATORS OF THIS EQUIPMENT.

*Study these SAFETY RULES carefully before operating or servicing applicable equipment. Become familiar with this Owner's Manual and with your generator. Safe, efficient and reliable operation can only be achieved if generator is properly installed, operated and maintained. Many accidents are caused by failing to follow simple and fundamental rules or precautions. The manufacturer suggests that these GENERAL SAFETY RULES be copied and posted in potential hazard areas of the recreational vehicle. Stress safety to all operators and potential operators of this equipment.*

The manufacturer cannot possibly anticipate every possible circumstance that might involve a hazard. The warnings in this manual, therefore, are not all-inclusive. If you use a procedure, work method or operating technique that Generac does not specifically recommend, you must satisfy yourself that it is safe for you and others. You must also make sure the procedure, work method or operating technique that you chose, does not render the generator to be unsafe.

- For fire safety, the recreational vehicle generator must be properly installed and maintained. Installation must comply with applicable codes and standards. Also, the generator must be installed to conform to the manufacturer's detailed installation instructions. After installation, do nothing that might render the generator in noncompliance with such codes, standards and instructions.
- The recreational vehicle generator produces extremely dangerous electrical voltages and can cause dangerous, and possibly fatal, electrical shock. Avoid contact with bare wires, terminals, etc., while the unit is running. If you must work around an operating generator, stand on an insulated, dry surface to reduce shock hazard.
- Never work on this equipment or handle any electrical device while standing in water, while barefoot, or while hands or feet are wet. Dangerous electrical shock will result.
- Have the generator properly grounded (bonded) during installation onto the vehicle, either by solid mounting to the vehicle frame or chassis or by means of an approved bonding conductor, if so equipped. DO NOT reconnect the bonding conductor to any generator part that might be removed or disassembled during routine maintenance. If the grounding conductor must be replaced, use only a flexible conductor that is of No. 8 AWG copper wire minimum.
- Inspect fuel system frequently for leaks or damage. Repair or replace any damaged or leaking component immediately. Never attempt to change, alter or modify the generator fuel system in any way that might affect safety or compliance with applicable codes and standards.
- In case of accident caused by electric shock, shut down the source of electrical power at once. If you cannot do this, free the victim from live conductor. AVOID DIRECT CONTACT WITH THE VICTIM. Use a dry board, dry rope, or other non-conducting tool to free the victim from live conductor. If victim is unconscious, apply CPR (cardio-pulmonary resuscitation) and get medical help.
- The generator engine gives off DEADLY carbon monoxide gas through its exhaust system. This dangerous gas, if breathed in sufficient concentrations, can cause unconsciousness or even death. This exhaust system must have been properly installed, complying strictly with applicable codes and standards. After installing the unit, do nothing that might render the unit unsafe or in non-compliance with such codes and standards. The generator compartment must be completely vapor-sealed from vehicle interior. There must be no possibility of exhaust fumes entering the vehicle interior. Never operate this equipment with a leaking or defective exhaust system.
- Never use the generator or any of its parts as a step. Stepping on the unit can stress and break parts and may result in dangerous operating conditions from leaking exhaust gases, leaking fuel, leaking oil or leaking coolant.
- The generator compartment needs adequate ventilation to expel toxic fumes and diesel fuel vapors. Do not alter the installation in any way that might obstruct air and ventilation openings. Keep such openings clear and unobstructed.
- Keep hands, feet, clothing away from drive belts, fans and other moving parts of this equipment. Never remove a drive belt or fan guards while the unit is operating.
- Although diesel fuel is not as volatile as gasoline or LP gas (liquid propane), it is still dangerous. Comply strictly with all laws and regulations regarding the handling of diesel fuel.
- Inspect the generator periodically. Repair or replace all damaged or defective parts immediately.
- Before performing any maintenance on the generator set, disconnect its battery cables to prevent accidental starting. First disconnect the cable from the battery post indicated by a NEGATIVE, NEG or (-). Reconnect that cable last.

# IDENTIFICATION RECORD

Please record the following information. Find this information on the Model/Serial Number Plate and on the Generator Data Plate, affixed to your generator.

Model Number \_\_\_\_\_


Serial Number \_\_\_\_\_

Rated kW \_\_\_\_\_

Rated Volts \_\_\_\_\_

Rated Hertz \_\_\_\_\_

Rated RPM \_\_\_\_\_

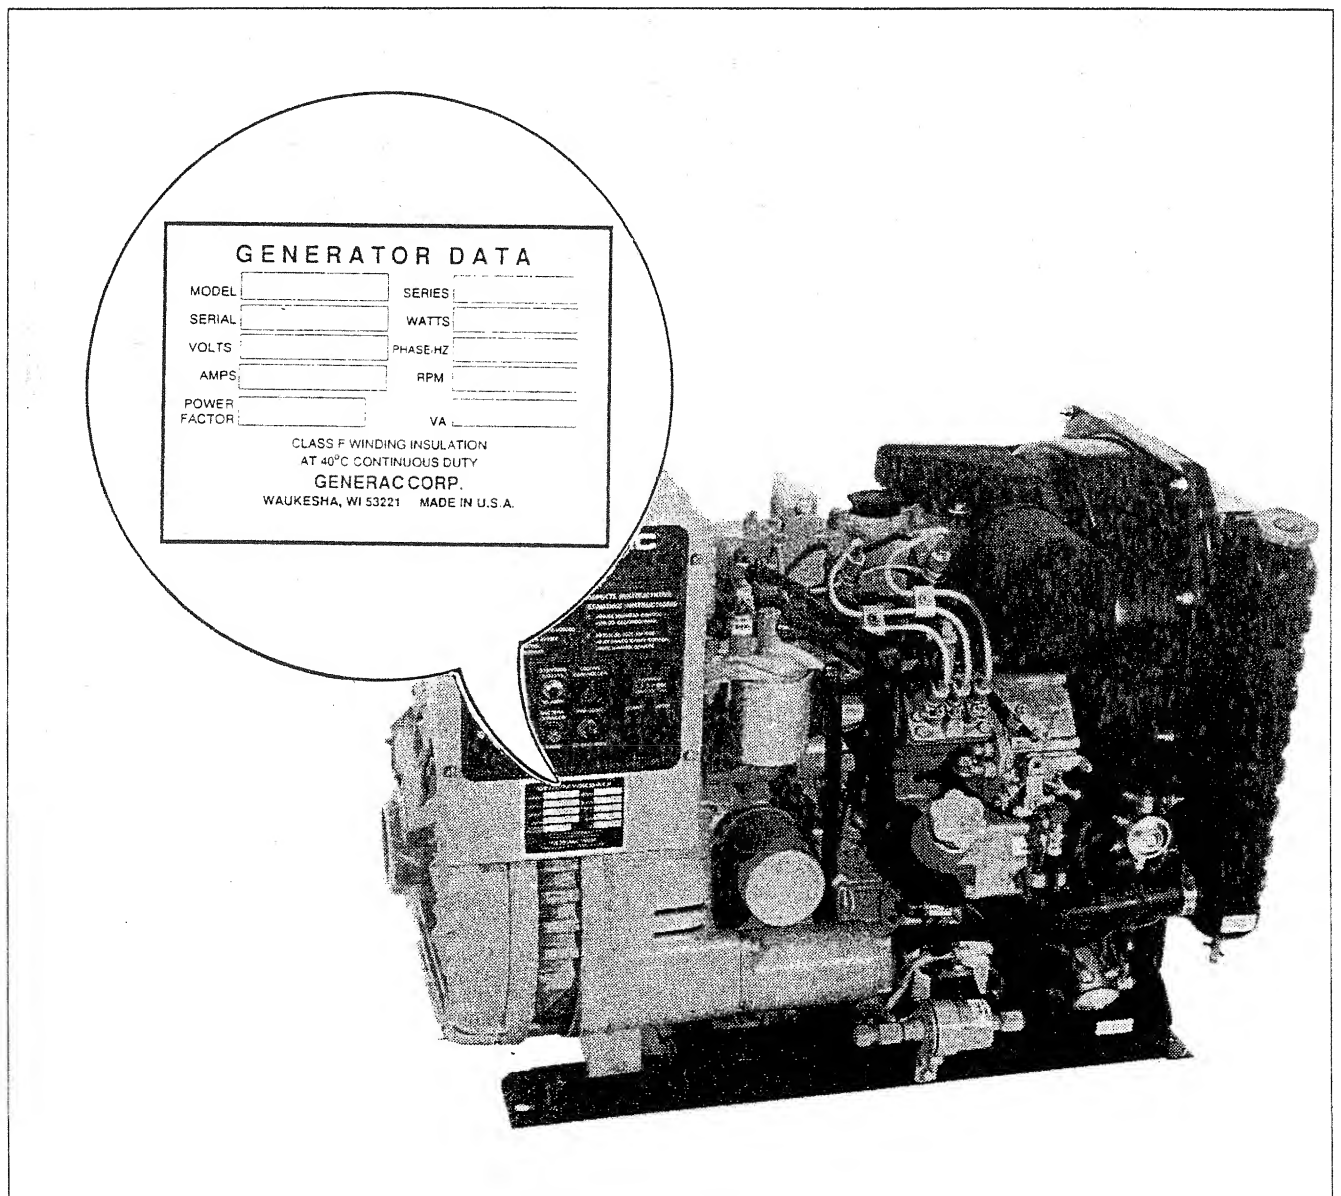

# READ THIS MANUAL THOROUGHLY

If you don't understand any portion of this manual, contact Generac for a demonstration of actual starting, operating and servicing procedures.

Throughout this publication and on tags and decals affixed to the generator, DANGER and CAUTION blocks are used to alert you to special instructions about a particular operation that may be hazardous if performed incorrectly or carelessly. Observe them carefully.

These safety warnings cannot eliminate the hazards they indicate. Complying strictly with the special instructions while servicing the unit plus "common sense" are major measures for preventing accidents.

The following definitions apply to DANGER, CAUTION and NOTE blocks found throughout the manual.

**DANGER! AFTER THIS HEADING YOU CAN READ INSTRUCTIONS FOR HANDLING, INSTALLING OR SERVICING THAT, IF NOT COMPLIED WITH STRICTLY, MAY RESULT IN PERSONAL INJURY.**

**CAUTION!** After this heading you can read instructions for handling, installing or servicing that, if not complied with strictly, may result in damage to equipment and/or property.

**NOTE:** After this heading you can read explanatory statements that require special emphasis.

The operator (driver) is responsible for proper and safe use of the vehicle, equipment of the vehicle and the safety of all vehicle occupants. We strongly recommend that the operator read this Owner's Manual and thoroughly understand all instructions before using this equipment. We strongly recommend instructing other occupants in the vehicle to properly start and operate

the generator. This prepares them if they need to operate the equipment in an emergency.

## OPERATION AND MAINTENANCE

The operator is responsible for performing all safety checks; to be sure that all maintenance for safe operations is performed promptly; and to have the equipment checked by an Authorized Dealer periodically. Normal maintenance service and replacement of parts are the responsibility of the Owner/Operator and, as such, are not considered defects in materials or workmanship within the terms of the warranty. Individual operating habits and usage contribute to the need for maintenance service.

Proper maintenance and care of your recreational vehicle generator keeps the number of problems to a minimum and keeps your operating expenses low. See your authorized Dealer/Distributor for service aids and accessories.


## HOW TO OBTAIN SERVICE

When your recreational vehicle generator set requires servicing or repairs, simply contact an authorized Service Station for assistance. Service technicians are factory-trained and are capable of handling all of your service needs.

When contacting an Authorized Service Facility of the factory about parts and service, always supply the complete model number and serial number of your unit as given on its data plate.

The warranty of your generator is included in this Owner's Manual as are listing for repair parts.

# GENERATOR FEATURES

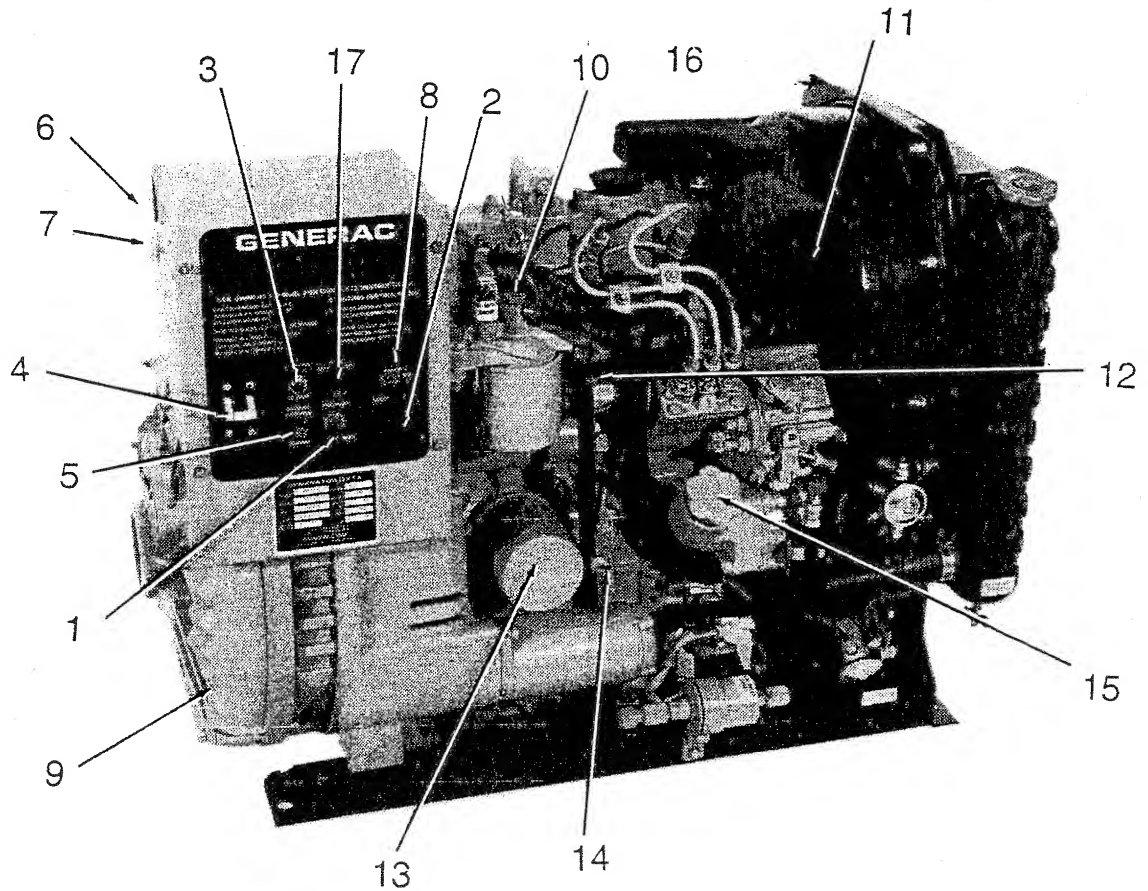

- |                                  |                                |
|----------------------------------|--------------------------------|
| 1. Engine Pre-heat Switch        | 10. Fuel Return Connection     |
| 2. Engine Start/Stop Switch      | 11. Air Cleaner                |
| 3. 10 amp DC Circuit Breaker     | 12. Oil Drain Hose             |
| 4. 35 amp AC Circuit Breaker     | 13. Oil Filter                 |
| 5. 30 amp Battery Chargingn Fuse | 14. Oil Dipstick               |
| 6. Generator AC Output Leads     | 15. Oil Filler Opening and Cap |
| 7. Remote Leads                  | 16. Fuel Filter                |
| 8. Hourmeter                     | 17. 14 amp Fuse                |
| 9. Generator                     |                                |

# GENERATOR FAMILIARIZATION

## GENERATOR APPLICABILITY

These generators have been designed and manufactured for the purpose of supplying electrical power for recreational vehicles. You should not modify the generator or use it for any application other than for what it was designed. If there are any questions pertaining to its application, write or call the factory. Do not use the unit until a competent authority has advised you.

**DANGER: FOR FIRE SAFETY, THE GENERATOR MUST HAVE BEEN PROPERLY INSTALLED IN COMPLIANCE WITH APPLICABLE CODES AND STANDARDS. THE GENERATOR ALSO MUST HAVE BEEN INSTALLED IN STRICT COMPLIANCE WITH THE MANUFACTURER'S DETAILED INSTALLATION INSTRUCTIONS. FOLLOWING INSTALLATION, NOTHING MUST BE DONE THAT MIGHT RENDER THE UNIT IN NON-COMPLIANCE WITH SUCH CODES, STANDARDS AND INSTRUCTIONS.**

You can use this generator set to supply electrical power for operating 120/240 volts, single-phase, 60 Hz, a-c electrical loads requiring up to 7,500 watts (7.5 kW) of power. Those electrical loads cannot exceed up to 62.5 a-c amperes of current at 120 volts, or 31.2 a-c amperes at 240 volts.

**CAUTION: Do not overload the generator.** Some installations may require that electrical loads be alternated to prevent overloading. Applying excessively high electrical loads may damage the generator or may shorten its life. Add up the rated watts of all electrical lighting, appliance, tool and motor loads the generator will power at one time. This total should not be greater than the wattage capacity of the generator. If an electrical device nameplate gives only volts and amps, multiply volts times amps to obtain watts (volts x amps = watts). Some electric motors may require more watts of power (or amps of current) for starting than for continuous operation.

## INSTALLATION

This Owner's Manual has been prepared assuming that competent, qualified technicians installed the generators into recreational vehicles. We also assume installer complied with all applicable codes, standards and regulations pertaining to installation.

An INSTALLATION MANUAL was shipped with the generator. That manual contains manufacturer's instructions and recommendations for installing the unit into a recreational vehicle. Following installation, installers should forward the Installation Manual to Owner/Operators for their information. Owners/Operators have the responsibility to make sure that nothing is done that might render installation unsafe or so it will not comply with applicable codes, standards and instructions.

The owner/operator should be sure the unit has been installed to allow adequate ventilation for cooling and exhaust air.

## SAFETY

Before attempting to use the generator set, carefully read GENERAL SAFETY RULES inside the cover of this Manual. Comply strictly with these RULES to prevent accidents and damage to equipment and/or property. Generac suggests that copying and posting GENERAL SAFETY RULES in potential hazard areas of the vehicle. Stress safety to all operators and potential operators of this equipment.

## GENERATOR A-C CONNECTION SYSTEM

The generator is equipped with a dual stator AC power windings. These two stator windings supply electrical power to customer electrical loads by means of a dual 2-wire connection system. Note, however, the neutral is grounded.

The generator has been installed so that units power 120/240 volts AC loads (Figure 1); or you can rewire them to connect only 120 volts AC electrical loads. Be sure to add jumper wire between circuit breakers (C.B. in Figure 2) when connecting for 120 volts

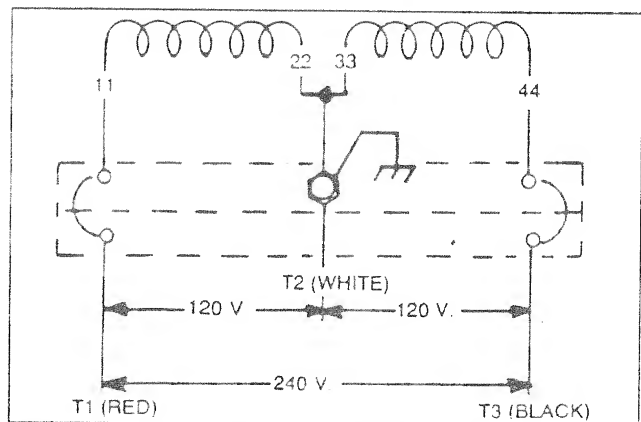


Figure 1 — Connections for 120/240 Volts

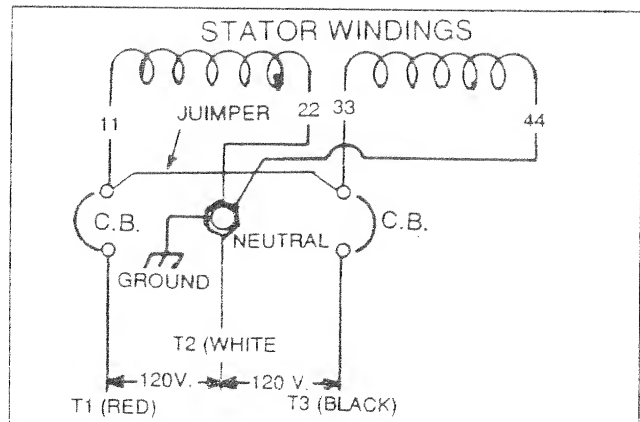


Figure 2 — Connections for 120 Volts Only

## GENERATOR CONTROL PANEL

See Figure 3 to identify the following components:

**Hourmeter:** Provides continuous indication of engine operating time, in hours and tenths of hours. Use the hourmeter with the periodic maintenance schedule, to make sure that required periodic maintenance tasks are completed on a timely basis.

**Engine-Stop/Start Switch:** To crank the engine, hold switch at START position. Release the switch when the engine starts. To shut down an operating engine, set the switch to STOP.

**10-Amp Circuit Breaker:** Protects the DC control circuit against overload. If the circuit breaker has opened due to an overload, engine preheat and start functions cannot occur. The breaker is a "push to reset" type.

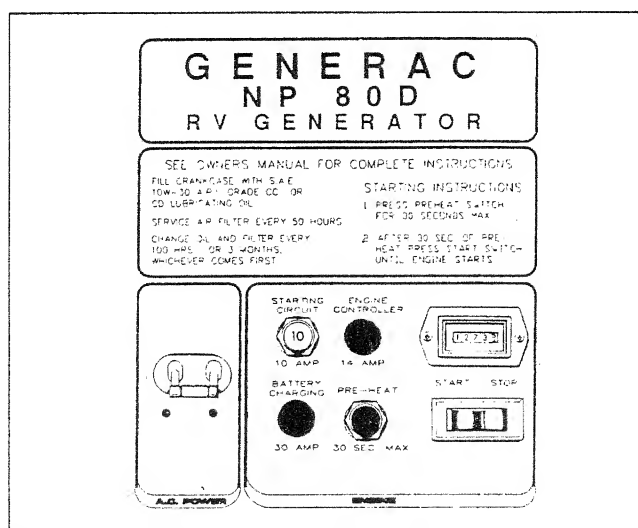


Figure 3 — Generator Control Panel

**Dual AC Circuit Breaker:** Rated at 35 AC amps, the circuit breaker (Figure 4) protects the generator's AC output circuit against overload and provides a method of turning OFF the generator's 120/240 volts AC output to vehicle circuits.

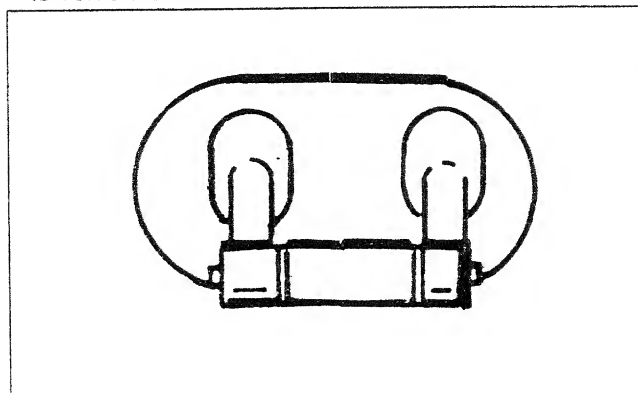


Figure 4 — Dual 35-amp Circuit Breakers

**Preheat Switch:** The diesel engine is equipped with glow plugs, one for each cylinder. When you press the preheat switch (Figure 3), the glow plugs heat the engine combustion chamber for quicker starts in cold weather. To preheat the combustion chamber for quicker starts in cold weather. Press the switch and between 15 and 30 seconds. Continue holding in the preheat switch while cranking the engine until it starts.

**NOTE:** Refer to THE GENERATOR A-C CONNECTION SYSTEM on Page 4. Individual installations will differ. If an overload occurs, the dual breakers will open the hot stator leads (11 and 44). When the generator has been connected for 120 volts only, one of the dual circuit breakers will open stator AC output lead No. 11 (hot lead).

## REMOTE START/STOP PANEL

A remote mounted Start/Stop Panel is available, which allows you to start and stop the generator engine conveniently from inside the vehicle.

You can also order a remote panel that includes meters and gauges for monitoring low oil pressure, high coolant temperature and low coolant level (Figure 5), in addition to a start/stop switch. The panel also includes an ammeter, a voltmeter and an hourmeter.

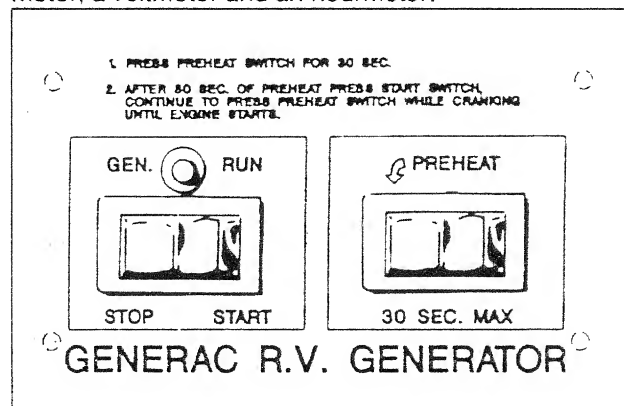


Figure 5 — Remote Start/Stop & Gauge Panel

## BEFORE STARTUP

- **Check Engine Crankcase Oil Level:** Refer to SPECIFICATIONS and MAINTENANCE sections for procedures and recommendations.

**CAUTION!** Any attempt to crank or start the engine before properly servicing it with recommended oil will result in an engine failure.

**NOTE:** Engine was factory serviced with a high quality oil classified "For Service CD" or "For Service CC" and having a viscosity rating of SAE 30. The installer may have refilled the crankcase with an oil more suitable for ambient temperature ranges in your area.



- **Check Coolant Level:** Check coolant level prior to initial use and at recommended intervals. Refer to SPECIFICATIONS and MAINTENANCE sections for procedures and recommendations.
- **Check Fuel Supply:** Make sure an adequate supply of clean fuel is available to the engine. Many installations include a Fuel Shutoff Valve, which you must open before starting the engine.

**NOTE:** On some installations, the generator may have been provided with its own fuel tank. On other installations, the generator may "share" with the vehicle's fuel tank. When the vehicle's tank is shared, some installers may have installed a generator fuel pick up tube in the shared tank that is shorter than the vehicle's pick up tube. When a shorter generator fuel pickup tube is installed in the tank, the generator will run out of gas while sufficient fuel remains in the tank for vehicle engine operation.

### START THE GENERATOR

To start the generator from either the generator control panel or from the optional Remote Panel, proceed as follows:

1. Turn OFF electrical loads, using whatever means provided.

**NOTE:** If starting from the generator panel, turn OFF loads by setting the generator's main circuit breaker to OFF or OPEN. If starting from a Remote Panel, turn OFF loads using whatever means is provided in the vehicle (such as a main circuit breaker.)

2. Press the preheat switch (if engine is cold) for between 15 and 30 seconds.
3. At the same time, hold the Engine-Start/Stop Switch at START and press the preheat switch to crank engine. Release the switch when the engine starts.
4. Let the engine stabilize and warm up.
5. Turn ON electrical loads, using whatever means provided.

### SHUTTING DOWN THE GENERATOR

1. Turn OFF electrical loads, using whatever means provided.
2. Let the engine run at no-load for a few minutes to stabilize internal temperatures.
3. Set the Engine-Run/Stop Switch to STOP position.



## ADDITIONAL INFORMATION

### AUTOMATIC LOW OIL PRESSURE SHUTDOWN

The engine is equipped with a normally-closed (N.C.) oil pressure switch (Figure 6). Engine oil pressure holds the switch open during cranking and operation. Should oil pressure drop below about 15 psi, the switch contacts close and the engine automatically shuts down.

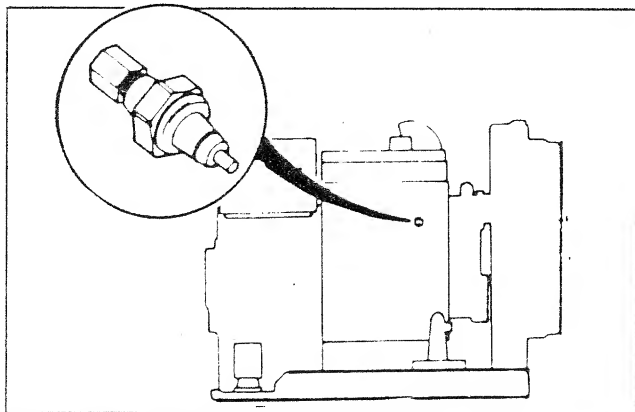


Figure 6 — Low Oil Pressure Switch

### HIGH COOLANT TEMPERATURE SHUTDOWN

This switch (Figure 7) is a normally open (N.O.) thermostatic device which is immersed in engine coolant. Should engine coolant temperature exceed about 230°F (110°C), the switch contacts close and the engine shuts down.

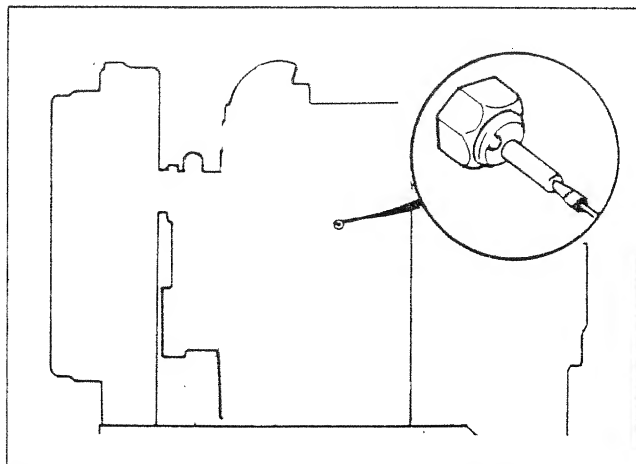


Figure 7 — High Coolant Temperature Switch

### OVERSPEED SHUTDOWN

The generator control panel houses an Engine Controller circuit board (Figure 8). That circuit board receives a-c frequency signals from generator stator leads 11 and 22. Should a-c frequency exceed about 72 Hz (2160 rpm), circuit board action initiates an automatic shutdown after a few seconds.

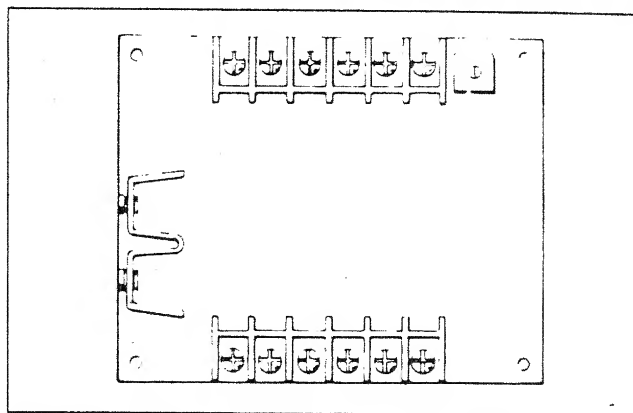


Figure 8 — Engine Controller Circuit Board

**NOTE:** After an overspeed shutdown, the engine may be cranked and re-started. However, if the engine overspeeds again, the engine shuts down again.

### ENGINE GOVERNED SPEED

The generator is equipped with a 4-pole revolving field (rotor) which must be driven at 1500 rpm to produce the unit's rated a-c frequency of 50 Hz. The diesel engine governor was factory set to about 52 Hz. (1560) at no-load. After installing it, the installation technician should check and adjust the governed speed. Setting the no-load frequency slightly high helps prevent excessive frequency, rpm and voltage droop under heavy electrical loading.

**DANGER: DO NOT TAMPER WITH THE ENGINE GOVERNOR SETTINGS. EXCESSIVELY HIGH ENGINE SPEEDS ARE DANGEROUS AND INCREASE THE RISK OF PERSONAL INJURY AND DAMAGE TO EQUIPMENT AND/OR PROPERTY. EXCESSIVELY LOW SPEEDS IMPOSE A HEAVY LOAD ON THE ENGINE WHEN ADEQUATE ENGINE POWER IS NOT AVAILABLE AND MAY SHORTEN ENGINE LIFE. THE GENERATOR SUPPLIES CORRECT RATED FREQUENCY AND VOLTAGE ONLY AT THE PROPER SPEED. SOME ELECTRICAL DEVICES MAY BE DAMAGED BY INCORRECT FREQUENCY AND/OR VOLTAGE. IF ENGINE SPEED APPEARS TO BE INCORRECT, CONTACT YOUR NEAREST AUTHORIZED SERVICE FACILITY.**

### 25-HOUR BREAK-IN PERIOD

The first 25 hours of operation is the break-in period for the generator. Properly breaking in the generator is essential to reducing oil consumption and enhancing engine performance. During the break-in period, observe the following rules:

- For the first 25 hours, run the generator at varying electrical loads, to help set the engine piston rings properly.

- Following the initial 25-hour break-in period, avoid light electrical loads for the next 75 hours of operation. The unit should be loaded at 50% (or more) of its capacity during those 75 hours. Repeated light loads during break-in period may improperly seat the piston rings, resulting in blowby and high oil consumption.
- Check oil level frequently during the break-in period. Add oil if needed. It is natural for the generator engine to consume much oil until the piston rings have seated properly.
- When the 25-hour break-in period is done, complete the tasks recommended under 25-HOUR CHECK-UP PERIOD.

## 25-HOUR CHECK-UP PERIOD

After the first 25 hours of operation have been completed, contact an Authorized Service Facility for the following maintenance. The Owner/Operator is responsible for any changes.

- Change engine crankcase oil and oil filter.
- Check all fluid levels.
- Check all cooling system hoses and fittings for damage, deterioration, looseness, etc. Check all hose clamps for tightness and security.
- Check engine for proper operation.
- Inspect the diesel engine fuel system for leaks, tightness and security of fuel fittings and hoses.
- Inspect drive belts for condition and proper tension.
- Inspect the exhaust system for damage, deterioration, leaks, proper operation.
- Inspect the electrical system.
- Inspect the installation for safety violations, compliance with codes and standards.

## FREEZING TEMPERATURE OPERATION

The engine cooling system should have been properly filled with a 50-50 mixture of ethylene glycol base anti-freeze and soft water. When adding coolant to the radiator or to the coolant recovery bottle, add only the recommended 50-50 mixture. Refer to SPECIFICATIONS section. If the recommended 50-50 mixture is added to the system consistently, the unit adequately protects against freezing temperatures.

## ATTENTION REQUIRED AFTER SUBMERSION

If the generator has been submerged in water, it must NOT be started and operated. Following any submersion in water, have an authorized Generac Service Facility thoroughly clean and dry the generator.

## OPERATING PRECAUTIONS

Never operate the generator set while the vehicle is parked over dry leaves, dry grass or any other combustible substance. The generator's exhaust system becomes extremely hot and can cause fire if it is too close to combustible materials.

The generator's exhaust system gives off DEADLY carbon monoxide gas. This dangerous gas, if breathed in sufficient concentrations can cause unconsciousness and even death. Never operate the generator set with the vehicle inside any garage or other enclosed area. Never operate the generator with a leaking exhaust system. Close windows in the vicinity of the generator exhaust outlet and take any other steps that may be necessary to prevent exhaust gases from entering rooms or areas occupied by people or animals.

## EFFECTS OF MOISTURE AND DIRT

Keep the generator set as clean and dry as possible. Protect the unit against excessive dust, dirt, corrosive vapors, road splash, etc. Permitting dirt and moisture to accumulate on generator windings will have an adverse affect on the insulation resistance of those windings.

When moisture is allowed to remain in contact with windings, some of that moisture will be retained in voids and cracks in the insulation. This causes a reduced insulation resistance and will eventually cause problems. Dirt will make the problem worse, since dirt tends to hold moisture in contact with the windings. Salt (as from sea air) will also worsen the problem since it tends to absorb moisture from the air. Salt and moisture, when combined, form a good electrical conductor.

# SPECIFICATIONS

## FUEL REQUIREMENTS

Recommended fuel is any high quality, automotive type diesel fuel conforming to JIS No. 2D diesel fuel. Keep the fuel clean.

## RECOMMENDED FLUIDS

**Engine Oil:** Use a high quality detergent oil classified "For Service CC or CD." Detergent oils keep the engine cleaner and reduce carbon deposits. Use oil having the following SAE viscosity rating, based on the ambient temperature range anticipated before the next oil change:

Temperature	Oil Grade (recommended)
Above 100°F	SAE 40
40°-100°F	SAE 10W-30 or SAE 30
Below 40°F	SAE 5W-20 or 5W-30

**Coolant:** Use a mixture of half low silicate, ethylene glycol base anti-freeze and half soft water. Coolant system capacities may vary, depending on the specific installation, length of system hoses, radiator use, etc. Use only soft water and low silicate anti-freeze. If desired, a high quality rust inhibitor may be added to the recommended coolant mixture. When adding coolant, always add the recommended 50-50 mixture.

**CAUTION!** Do not use any chromate base rust inhibitor with ethylene glycol base anti-freeze or chromium hydroxide ("green slime") forms and causes overheating. You must chemically clean engines the have operated with a chromate base inhibitor before adding ethylene glycol base anti-freeze. Using any high silicate anti-freeze boosters or additives will also cause overheating. In addition, using any soluble oil inhibitor is not recommended for this equipment.

## GENERATOR SPECIFICATIONS

Series ..... NP-80D  
Model Number..... 9344-1  
Rated Maximum Continuous  
a-c Power ..... 7500 watts (7.5 kW)  
Rated Volts ..... 120/240\*  
Rated Maximum Continuous Load Current  
At 120 Volts ..... 62.5 amps  
At 240 Volts ..... 31.25 amps  
Rated a-c Frequency..... 60 Hz. at 1800 rpm  
Phase ..... 1-Phase  
Power Factor ..... 1.0  
Number of Rotor Poles..... 4  
Rotor Speed at No-Load ..... 1860 rpm

## ENGINE SPECIFICATIONS

Engine Type ..... 4-cycle diesel  
Displacement ..... 58.2 inches (954cc)  
Cooling Method ..... Water Cooled  
Combustion Chamber ..... Swirl Type  
Cylinders and Arrangement ..... 3  
Bore..... 2.95 inches (75mm)  
Stroke..... 2.83 inches (72mm)  
Compression Ratio..... 23 to 1  
No. of Main Bearings..... 5  
Break Mean  
Effective Pressure ..... 97

# MAINTENANCE

## PERIODIC MAINTENANCE SCHEDULE

\* Performed by Authorized Service Facility

\*\* Performed by Owner/Operator

### A. After the first 25 Operating Hours\*

1. Change Oil and Oil Filter.
2. Check engine coolant level.
3. Inspect cooling system.
4. Check engine operation.
5. Inspect drive belts.
6. Inspect exhaust system.
7. Inspect electrical system.
8. Inspect battery.
9. Check governed speed setting.
10. Check engine valve clearance.
11. Inspect air cleaner/flame arrestor.
12. Clean the generator.

### B. Every 8 Hours of Operation\*\*

1. Check coolant level in coolant recovery bottle.
2. Check fuel level.
3. Check engine oil level.

### C. Once Each Week\*\*

1. Inspect the generator set.
2. Inspect the generator battery.

### D. Every 100 hours or Once Each Month\*\*

(whichever comes first)

1. Inspect cooling system.
2. Inspect exhaust system.

### E. Every 6 months or Every 250 Operating Hours\*

(whichever comes first)

1. Change engine oil and filter.
2. Check engine operation.
3. Inspect drive belts.
4. Inspect electrical system.
5. Inspect and check battery.
6. Check engine governor setting.
7. Clean or replace fuel filters.
8. Inspect air cleaner/flame arrestor.
9. Clean the generator.
10. Check cooling system and coolant level.
11. Inspect exhaust system.
12. Inspect fuel system.

### F. Once Annually or Every 500 Operating Hours\*

(whichever comes first)

1. Check engine valve clearance.
2. Check engine compression and condition.
3. Check fuel injection timing.
4. Check/test fuel injection nozzles.

### G. Once Every Two Years

1. Drain, flush and refill cooling system.

## OVERLOAD PROTECTION FOR ENGINE D-C ELECTRICAL SYSTEM

Engine cranking, start up and running are controlled by a solid state Engine Controller circuit board. Battery voltage is delivered to that circuit board via 10 amp circuit breaker and 14 amp in-line fuse. These overcurrent protection devices will open if circuit is overloaded.

**CAUTION!** If a circuit breaker opens or a fuse element melts, you should find the cause of the overload before resetting the circuit breaker or replacing the fuse.

**10 amp Circuit Breaker:** If the circuit breaker opens due to an overload, you cannot crank or start the engine. The circuit breaker is a "push-to-reset" type. For emergency shutdown, pull the circuit breaker open. Also see "Generator Control Panel" on Page 5.

**14 Amp Fuse:** If the fuse element melts open, you cannot crank or start the engine. If you must replace the fuse, use only identical 14 amp fuse (Figure 9).

**30 amp Fuse:** The generator set battery is charged during operation by a d-c alternator, driven by the engine. This 30 amp fuse protects the charging circuit against overload. Should you need to replace the fuse, use only an identical 30 amp fuse (Figure 10).

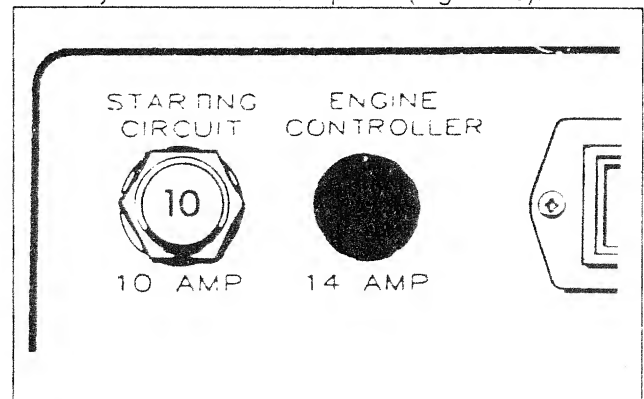


Figure 9 — 14 amp Fuse

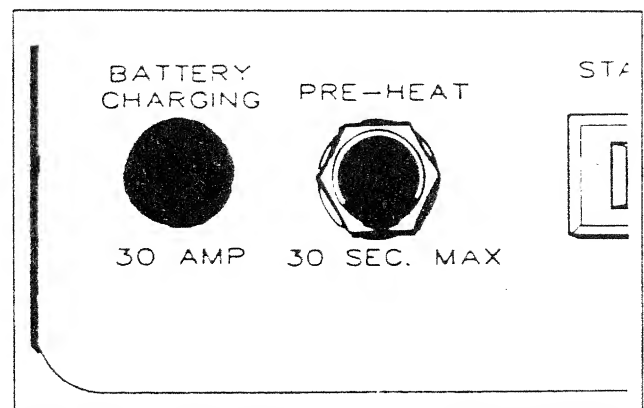


Figure 10 — 30 amp Fuse for Battery Charge Circuit

## CHECKING FLUID LEVELS

**Check Engine Oil:** Check the engine crankcase oil level at least every 8 hours that you operate the unit, or before every time you use it (Figure 11).

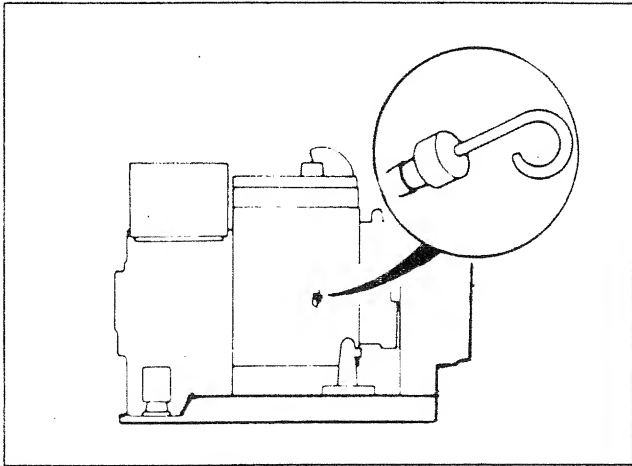


Figure 11 — Checking Oil Level

- Make sure the generator is as level as possible.
- Remove oil dipstick and wipe dry with a clean, lintfree cloth.
- Install oil dipstick, then remove again.
- Oil should be at dipstick FULL mark. Never operate the generator with oil level below dipstick ADD mark. **DO NOT FILL CRANKCASE ABOVE DIPSTICK FULL MARK.**

**Battery Fluid:** Check battery electrolyte fluid at least once weekly. Fluid should cover separators in all battery cells. If fluid level is low, add distilled water to cover tops of separators. **DO NOT USE TAP WATER IN BATTERY.**

**Engine Coolant:** Check coolant level in coolant recovery bottle.

- Add the recommended coolant mixture as necessary.
- Periodically remove radiator pressure cap to make sure the coolant recovery system is functioning properly. Coolant should be at bottom of radiator filler neck. If coolant level is low, inspect gasket in radiator pressure cap. Replace cap, if necessary. To have pressure cap tested, contact an authorized Generac Service Facility. Inspect cooling system and coolant recovery system for leaks.

## INSPECT GENERATOR SET

Once each week inspect the generator set. Look for fuel, oil coolant leaks. Check for missing or loose nuts, bolts and other fasteners. Check for damage. If unit is dirty, it may be cleaned with a damp cloth or soft brush. Inspect the exhaust system. **NEVER** operate the generator with a defective exhaust.

## INSPECT COOLING SYSTEM

Inspect the entire cooling system once each month or every 100 operating hours, whichever occurs first. Check for leaks, condition of hoses, tightness of clamps.

## CHANGING ENGINE OIL

Refer to PERIODIC MAINTENANCE SCHEDULE for engine oil and filter change frequencies. You should also change generator engine oil before placing the vehicle into storage.

Drain the oil while engine is still warm from running, which means warm up the engine, shut it down and drain immediately as follows (Figure 12):

1. Remove OIL DRAIN HOSE from its retaining clip.
2. Loosen and remove OIL DRAIN HOSE CAP. Drain oil completely into suitable container.

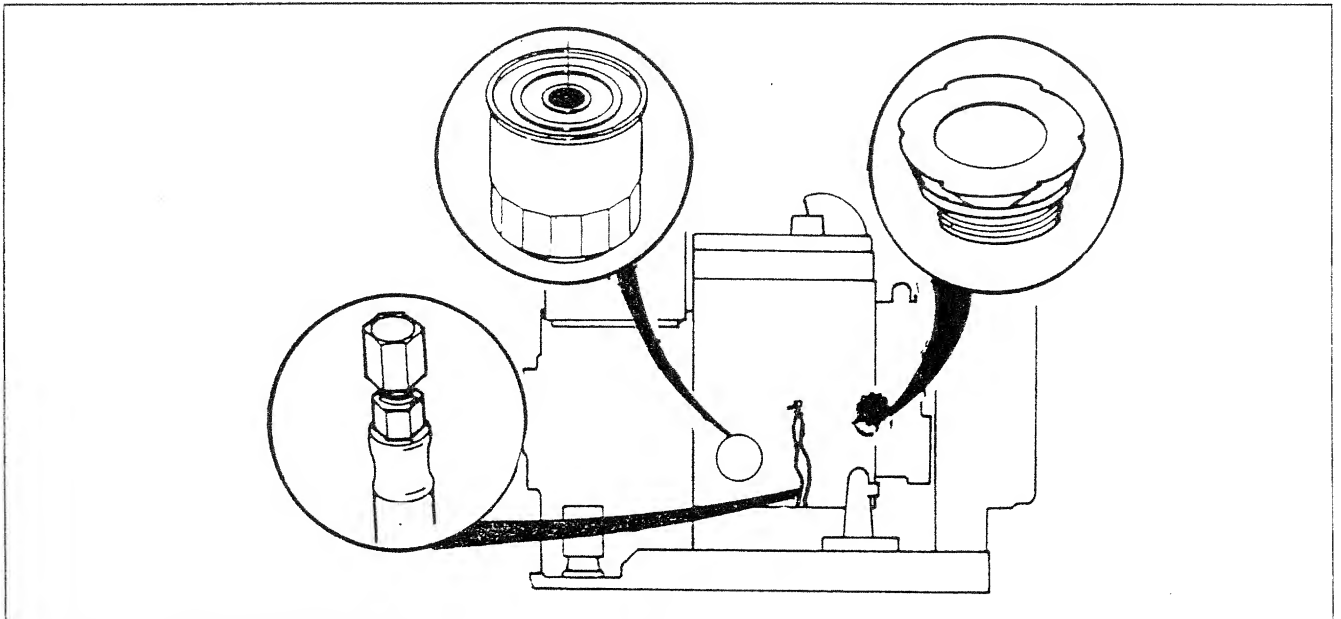


Figure 12 — Changing Engine Oil

3. When all oil has drained, install and tighten OIL DRAIN HOSE CAP.
4. Turn OIL FILTER counterclockwise and remove. Dispose of old filter.
5. Apply a light coating of engine oil to seal of new oil filter. Install FILTER and tighten by hand only. DO NOT OVERTIGHTEN.
6. Remove OIL FILLER CAP. Add recommended oil (see SPECIFICATIONS). DO NOT OVERFILL ABOVE THE DIPSTICK "FULL" MARK. Crankcase oil capacity is 3.7 U.S. quarts (3.5 liters).

**CAUTION!** After refilling the crankcase with oil, always check oil level on dipstick. NEVER OPERATE ENGINE WITH OIL BELOW THE DIPSTICK "ADD" MARK.

7. Start engine and check for oil leaks.

### COOLANT CHANGE

Every two years, the cooling system should be drained, flushed and refilled by an Authorized Service Facility. See SPECIFICATIONS for cooling system recommendations.

### MISCELLANEOUS MAINTENANCE

**Cleaning the Generator:** Keep your standby generator as clean and as dry as possible. Dirt and moisture that is allowed to accumulate on internal generator windings have an adverse effect on insulation resistance.

Periodically clean generator exterior surfaces. A soft brush may be used to loosen caked on dirt. You can use a vacuum system or dry, low pressure air to remove any accumulations of dirt. If the generator is housed inside an all-weather enclosure, clean the enclosure with a soft, damp cloth or sponge and water.

Once each year have the generator cleaned and inspected by an Authorized Service Facility. That facility will use dry, low pressure air to clean internal windings. Parts inside the control console should be cleaned and inspected at this time as well.

Finally, have the insulation resistance of stator and rotor windings checked. If insulation resistances are excessively low, the generator may require drying.

**Battery:** All lead-acid storage batteries discharge when not in use. Refer to specific instructions and warnings that accompany your battery. If such information is not available, observe the following precautions when handling a battery:

- DO NOT use jumper cables and a booster battery to crank or start the generator engine.
- DO NOT recharge a weak battery while it is installed in the generator. Remove battery from generator and recharge in a well-ventilated area, away from fuel vapors, sparks, heat or flames.
- Battery electrolyte fluid is an extremely caustic sulfuric solution that can cause severe burns. DO NOT permit fluid to contact eyes, skin, clothing, painted surfaces, wiring insulation, etc. If you spill any battery fluid, flush the affected area with clear water immediately.
- Always wear safety glasses, rubber apron and gloves when handling a battery.
- Batteries give off explosive hydrogen gas while charging. The gas can form an explosive mixture around the battery for several hours after charging. Any spark, heat or flames can ignite the gas and cause an explosion which can shatter the battery, causing blindness or other serious injury.

### PERIODIC REPLACEMENT PARTS

Part Name	Generac Part No.
Oil Filter	127-70939
Radiator Cap	46627
Air Cleaner Element	70941
Fuel Filter	69858

# TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSES	REMEDY
Engine won't crank.	<ol style="list-style-type: none"> <li>1. 10 amp circuit breaker tripped.</li> <li>2. 14 amp fuse blown.</li> <li>3. Loose corroded or defective battery cables.</li> <li>4. Defective engine Start/Stop switch.</li> <li>5. Defective starter contactor.</li> <li>6. Defective starter motor.</li> </ol>	<ol style="list-style-type: none"> <li>1. Reset circuit breaker</li> <li>2. Replace fuse.</li> <li>3. Tighten clean or replace as necessary.</li> <li>4. Replace Start/Stop switch.</li> <li>5. Replace contactor.</li> <li>6. Replace starter motor.</li> </ol>
Engine cranks but won't start.	<ol style="list-style-type: none"> <li>1. Vehicle fuel shutoff valve is closed.</li> <li>2. Out of fuel.</li> <li>3. Fuel solenoid (FS) is defective</li> <li>4. Fuel pump (FP) is defective.</li> <li>5. Open Wire #14 from Engine Control C.B.</li> <li>6. Clogged fuel filter or fuel line.</li> <li>7. Engine mechanical parts failure.</li> <li>8. Spark plugs defective.</li> </ol>	<ol style="list-style-type: none"> <li>1. Open valve.</li> <li>2. Replenish fuel tank.</li> <li>3. Replace solenoid.</li> <li>4. Repair or replace fuel pump.</li> <li>5. Reconnect wire.</li> <li>6. Replace if clogged.</li> <li>7. Repair or replace parts.</li> <li>8. Clean, regap or replace plugs.</li> </ol>
Engine starts hard, runs rough.	<ol style="list-style-type: none"> <li>1. Flame arrestor (air cleaner) plugged or damaged.</li> <li>2. Defective fuel pump.</li> <li>3. Plugged fuel filter or fuel line.</li> <li>4. Water in fuel.</li> </ol>	<ol style="list-style-type: none"> <li>1. Clean or replace as needed.</li> <li>2. Replace or repair fuel pump.</li> <li>3. Replace filter; unclog fuel line.</li> <li>4. Drain tank and refill.</li> </ol>
Engine starts, shuts down when Start/Stop switch is released.	<ol style="list-style-type: none"> <li>1. Engine oil level is low.</li> <li>2. Engine is overheated.</li> <li>3. Defective Low Oil Pressure Switch</li> <li>4. Defective Coolant Temperature Switch</li> <li>5. Defective Engine Controller circuit board.</li> </ol>	<ol style="list-style-type: none"> <li>1. Check oil and add oil as needed.</li> <li>2. Check cooling system for leaks.</li> <li>3. Replace switch.</li> <li>4. Replace switch.</li> <li>5. Replace circuit board.</li> </ol>
Start/Stop Switch at STOP, engine continues to run	<ol style="list-style-type: none"> <li>1. Defective Start/Stop switch.</li> <li>2. Open/disconnected wire #18 between Start/Stop switch &amp; Engine Controller C.B.</li> <li>3. Open/disconnected wire #0 between Start/Stop switch &amp; Engine Controller C.B.</li> <li>4. Defective Engine Controller circuit board</li> </ol>	<ol style="list-style-type: none"> <li>1. Replace switch.</li> <li>2. Reconnect/close wire.</li> <li>3. Reconnect/close wire.</li> <li>4. Replace board.</li> </ol>
No a-c output from generator.	<ol style="list-style-type: none"> <li>1. Check 15-amp circuit breaker.</li> <li>2. Check vehicle circuit breaker &amp; fuses.</li> <li>3. Transfer switch set to NORMAL position</li> <li>4. Generator internal failure.</li> </ol>	<ol style="list-style-type: none"> <li>1. Reset to ON or CLOSED.</li> <li>2. Reset and replace, if necessary.</li> <li>3. Set to GENERATOR position.</li> <li>4. Take generator to Authorized Generac service facility.</li> </ol>




Drawing No. 83623



# ELECTRICAL SCHEMATIC — NP-80D GENERATOR


Drawing No. 83625

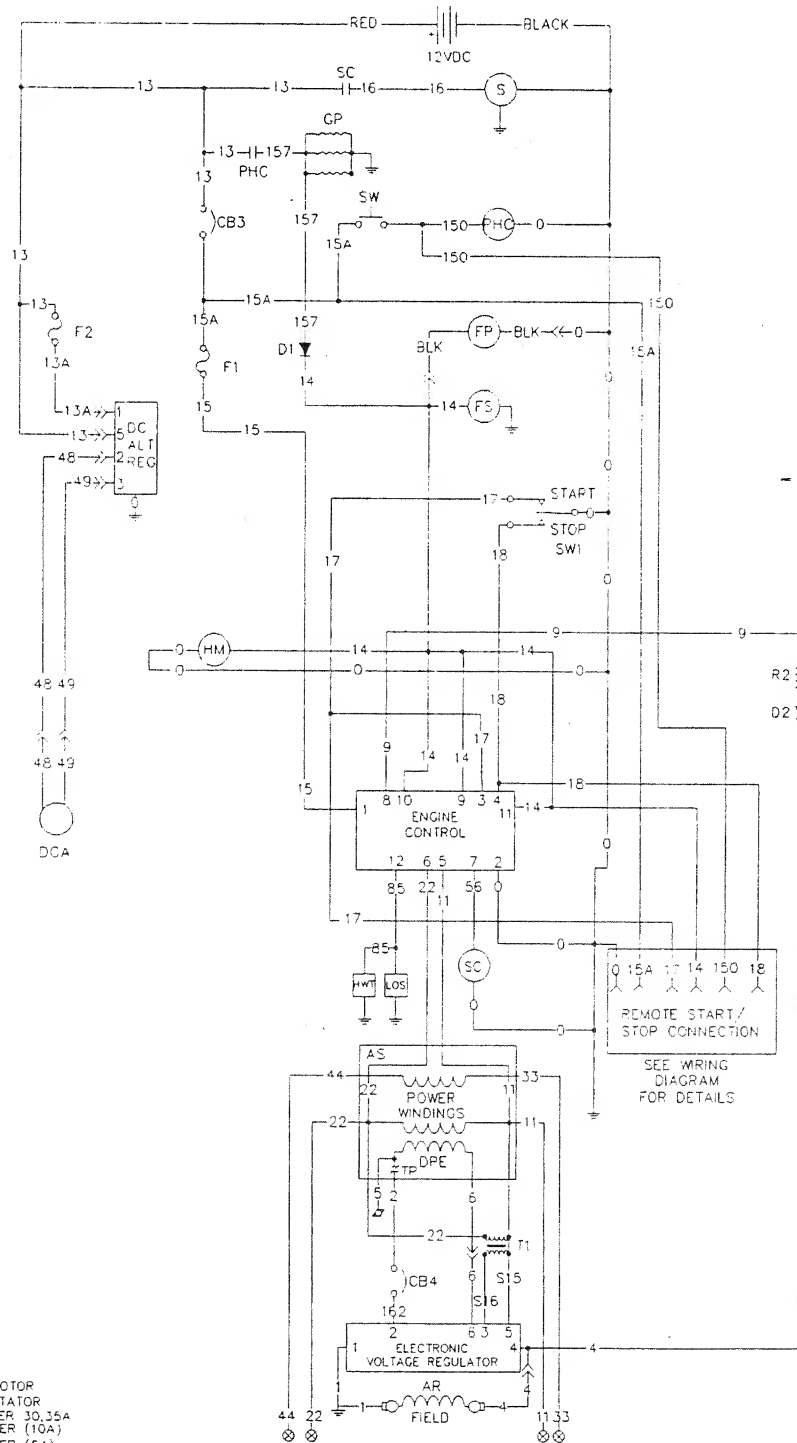

## LEGEND


AR - ALTERNATOR ROTOR  
 AS - ALTERNATOR STATOR  
 CB1 - CIRCUIT BREAKER 30, 35A  
 CB3 - CIRCUIT BREAKER (10A)  
 CB4 - CIRCUIT BREAKER (5A)  
 D1 - DIODE 600V, 6AMP  
 D2 - DIODE 600V, 6AMP  
 DCA - DC ALTERNATOR  
 DPE - EXCITATION WINDING  
 F1 - FUSE 14AMP SFE  
 F2 - FUSE 30A  
 FS - FUEL SOLENOID  
 FP - FUEL PUMP  
 HM - HOURMETER  
 HWT - HIGH WATER TEMP SWITCH  
 LOS - LOW OIL PRESSURE SWITCH  
 PHC - PREHEAT CONTACTOR  
 R2 - RESISTOR 10 OHM, SW  
 S - STARTER  
 SC - START CONTACTOR  
 SW - PREHEAT SWITCH  
 SW1 - SWITCH, START/STOP  
 T1 - SENSE TRANSFORMER  
 TP - THERMAL PROTECTOR

## CONNECTION OPTIONS

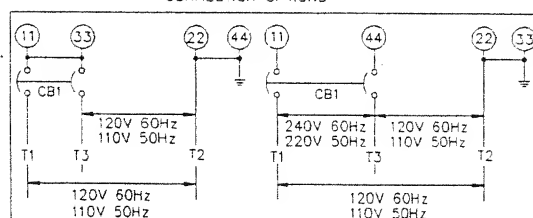

# EXPLODED VIEW — ENGINE COMMON PARTS

Drawing No. 81982

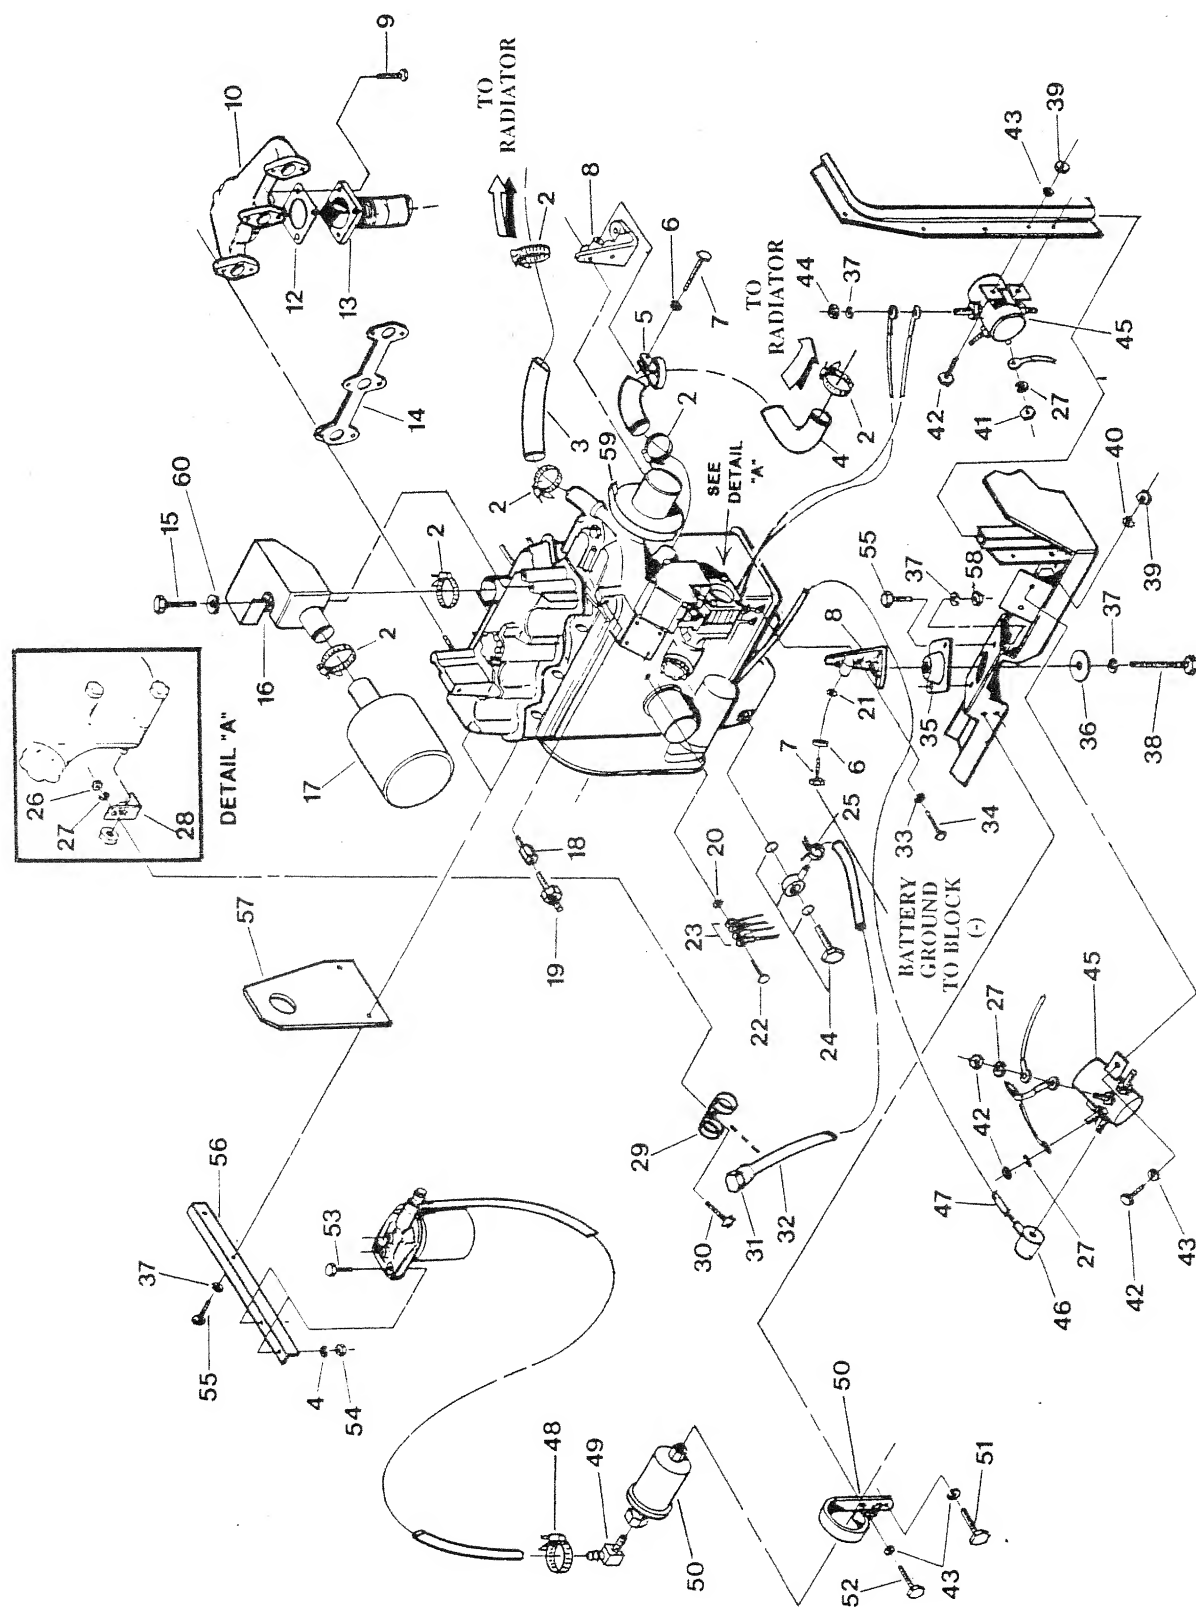


# REPAIR PARTS LIST — ENGINE COMMON PARTS

Drawing No. 81982

ITEM	PART NO.	QTY.	DESCRIPTION	ITEM	PART NO.	QTY.	DESCRIPTION
1	81932	1	1.0 Liter Diesel Engine	31	69811	1	Drain Cap
2	35586	6	1-3/4" Hose Clamp	32	69860-B	1	Oil Drain Hose
3	81946	1	Upper Radiator Hose	33	74018	4	M12 Lock Washer
4	81947	1	Lower Radiator Hose	34	74070	4	M12-1.25 x 40mm Capscrew
5	55934	1	Hose Retainer	35	70936	2	Vibrator Mount
6	22302	4	M10 Lock Washer	36	71956	2	Special Washer
7	51755	2	M10-1.5 x 16mm Capscrew	37	22129	12	M8 Lock Washer
8	72501	2	Engine Support	38	72553	2	M8-1.25 x 60mm Capscrew
9	43107	4	M8-1.25 x 25mm Capscrew	39	49813	4	M6-1.0 Hex Nut
10	81942	1	Exhaust Manifold	40	26850	2	M6 Shakeproof Washer
11	49813	6	M6-1.0 Hex Nut	41	22158	4	No. 10-32 Hex Nut
12	75674	1	Exhaust Outlet Gasket	42	42568	4	M6-1.0 x 20mm Capscrew
13	81975	1	Flex Exhaust Outlet	43	22097	6	M6 Lock Washer
14	357-70939	1	Manifold Gasket	44	24114	4	5/16"-18 Hex Nut
15	42909	1	M8-1.25 x 30mm Capscrew	45	56739	2	12 volts Solenoid
16	81936	1	Air Intake Chamber	46	75763	2	Red Vinyl Boot
17	70941	1	Air Filter	47	77745	2	Starter Cable
18	42574	1	1/8" NPT-1/8-28 Adaptor	48	40173	1	Hose Clamp
19	60108	1	Oil Pressure Switch	49	49340	1	Elbow (barb to thread)
20	26208	1	M8 Shakeproof Washer	50	74024	1	Fuel Pump Assembly
21	25507	1	M10 Washer	51	43146	1	M6-1.0 x 10mm Capscrew
22	42568	1	M8-1.25 x 20mm Capscrew	52	45757	1	M10-1.0 x 25mm Capscrew
23	81951	1	Engine Wire Harness	53	74069	2	M10-1.5 x 40mm Capscrew
24	72573	1	Oil Drain Fitting	54	74009	2	M10-1.5 Hex Nut
25	70928	1	Hose Clamp	55	39253	6	M8-1.25 x 20mm Capscrew
26	51716	1	M5-0.8 Hex Nut	56	72564	1	Fuel Filter Bracket
27	22152	5	M5 Lock Washer	57	71910-A	1	Lifting Bracket
28	81939	1	Oil Drain Bracket	58	45771	4	M8-1.25 Hex Nut
29	65852	1	Oil Drain Hose Clip	59	46233	1	3/8-30-1/8 V-Belt
30	71912	1	M5-0.8 x 8mm Screw	60	50190	1	Special M8 Flat Washer

# EXPLODED VIEW — ENGINE BLOCK

Drawing No. 82961

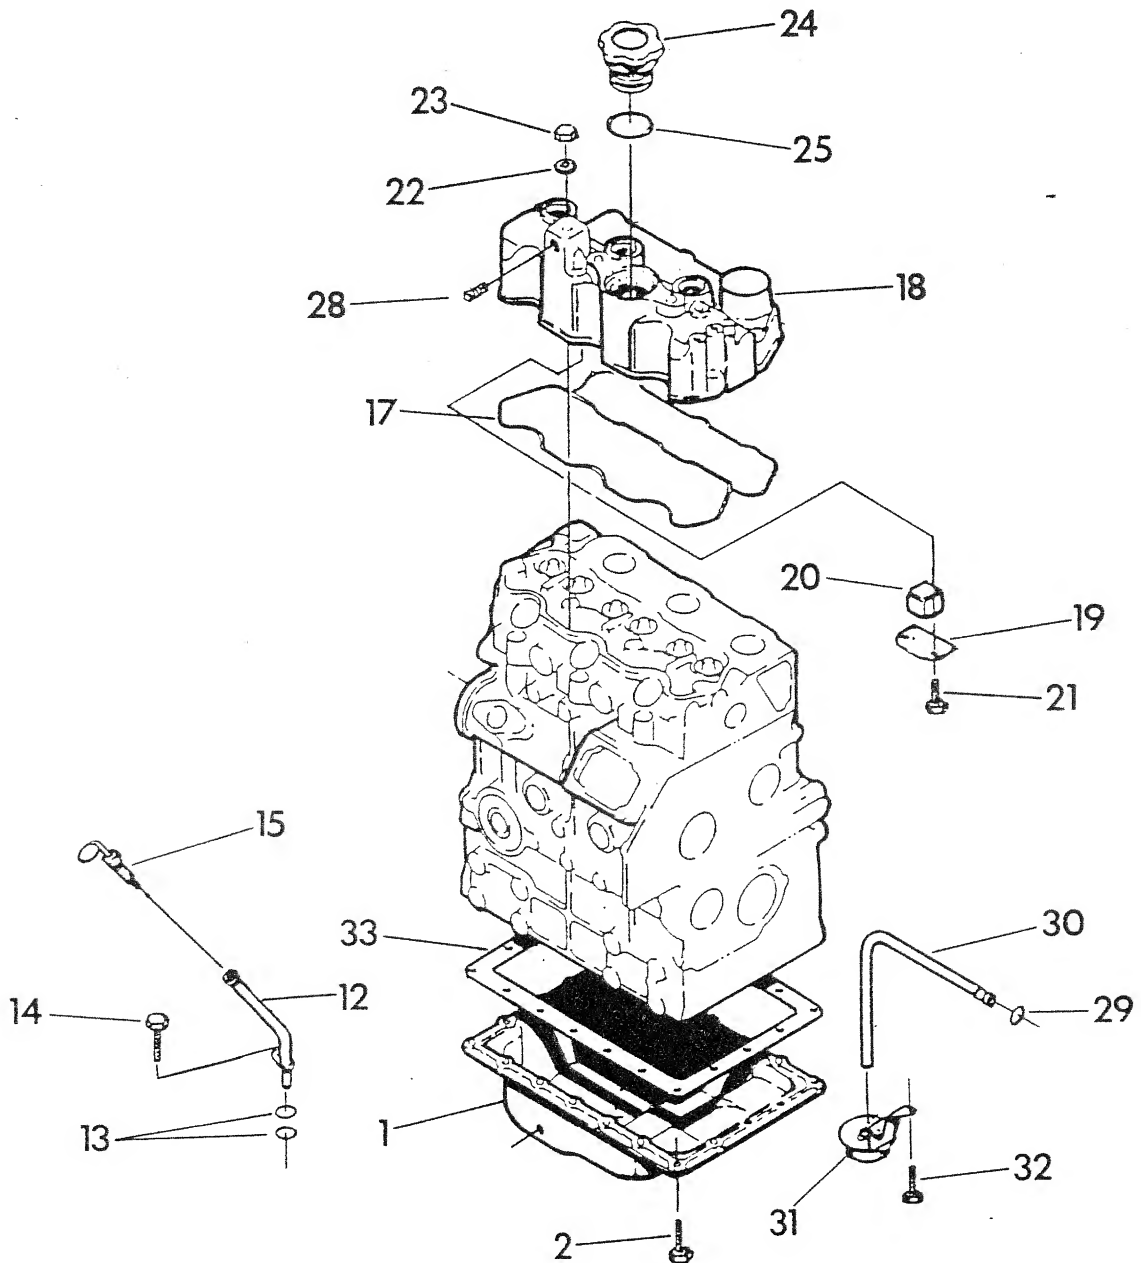


## EXPLODED VIEW — ENGINE BLOCK

Drawing No. 82961

ITEM	PART NO.	QTY.	DESCRIPTION
1	139-70939	1	OIL PAN
2	140-70939	20	BOLT
12	143-70939	1	DIPSTICK TUBE
13	144-70939	2	O-RING
14	145-70939	1	BOLT
15	146-70939	1	DIPSTICK
16	182-70939	1	ROCKER COVER GASKET
17	183-70939	1	ROCKER COVER GASKET
18	184-70939	1	ROCKER COVER
19	185-70939	1	OIL STOPPER
20	186-70939	1	SCREEN
21	145-70939	2	BOLT
22	168-70939	1	GASKET
23	187-70939	3	NUT
24	188-70939	1	CAP
25	189-70939	1	O-RING
28	26073-A	1	1/4" PIPE PLUG
29	244-70939	1	O-RING
30	245-70939	1	TUBING
31	246-70939	1	SUCTION FILTER
32	145-70939	2	BOLT
33	122-70939	1	GASKET

# EXPLODED VIEW — CRANKSHAFT, PISTON & FLYWHEEL

Drawing No. 75679

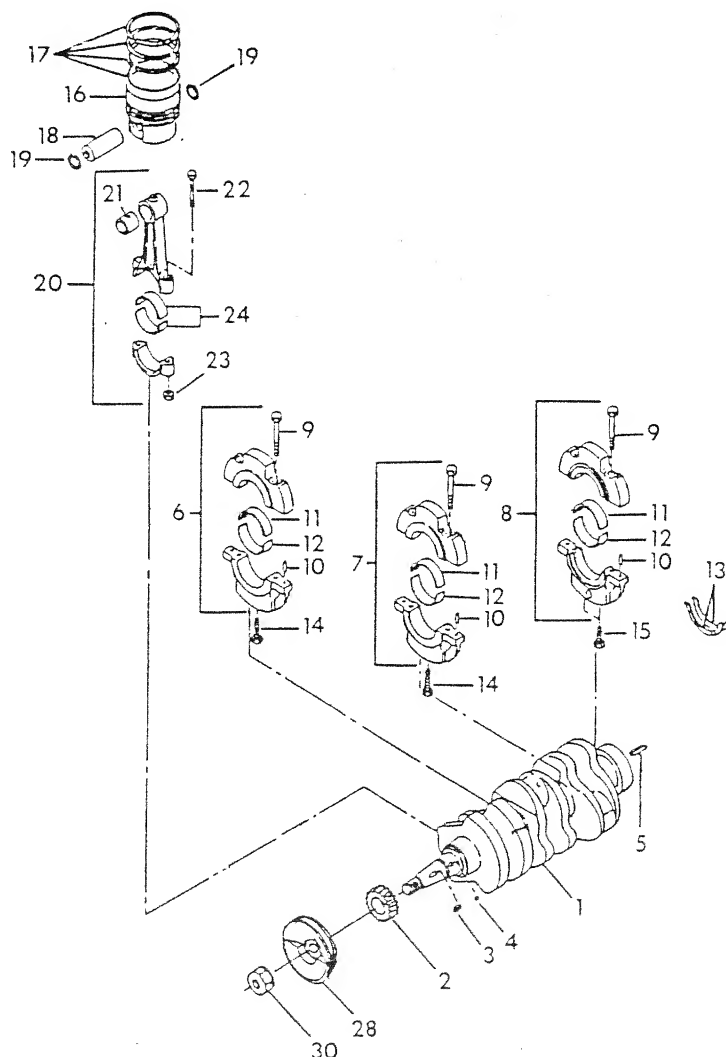


ITEM	PART NO.	QTY.	DESCRIPTION	ITEM	PART NO.	QTY.	DESCRIPTION
1	143-70939	1	Crankshaft Assembly	16	214-70939	3	Standard Piston Assembly
2	194-70939	1	Crankshaft Gear		215-70939	AR	Piston Assembly - 0.5mm O.S.
3	195-70939	1	Key		216-70939	AR	Piston Assembly - 1.0mm O.S.
4	196-70939	1	Dowel Pin	17	211-70939	3	Standard Piston Ring Set
5	226-70939	1	Spring Pin		212-70939	AR	Piston Ring Set - 0.5mm O.S.
6	197-70939	1	Bearing Holder		213-70939	AR	Piston Ring Set - 1.0mm O.S.
7	200-70939	1	Bearing Holder	18	217-70939	3	Piston Pin
8	201-70939	1	Bearing Holder	19	218-70939	6	Snap Ring
9	198-70939	6	Bolt	20	219-70939	3	Connection Rod Assembly
10	199-70939	6	Dowel Pin	21	220-70939	3	Bushing
11	202-70939	3	Standard Bearing	22	221-70939	6	Connecting Rod Bolt
	203-70939	AR	0.25mm U.S. Bearing	23	222-70939	6	Nut, Connecting Rod Bolt
	204-70939	AR	0.50mm U.S. Bearing	24	223-70939	6	Standard Bearing
12	205-70939	3	Standard Bearing		224--70939	AR	Bearing — 0.25mm U.S.
	206-70939	AR	0.25mm U.S. Bearing		225-70939	AR	Bearing — 0.50mm U.S.
	207-70939	AR	0.50mm U.S. Bearing	28	230-70939	1	Pulley
13	208-70939	2	Thrust Washer	30	231-70939	1	Nut
14	204-70939	2	Bolt				
15	210-70939	1	Bolt				

U.S. — UNDERSIZE  
O.S. — OVERSIZE



# EXPLODED VIEW — CYLINDER HEAD


Drawing No. 75678

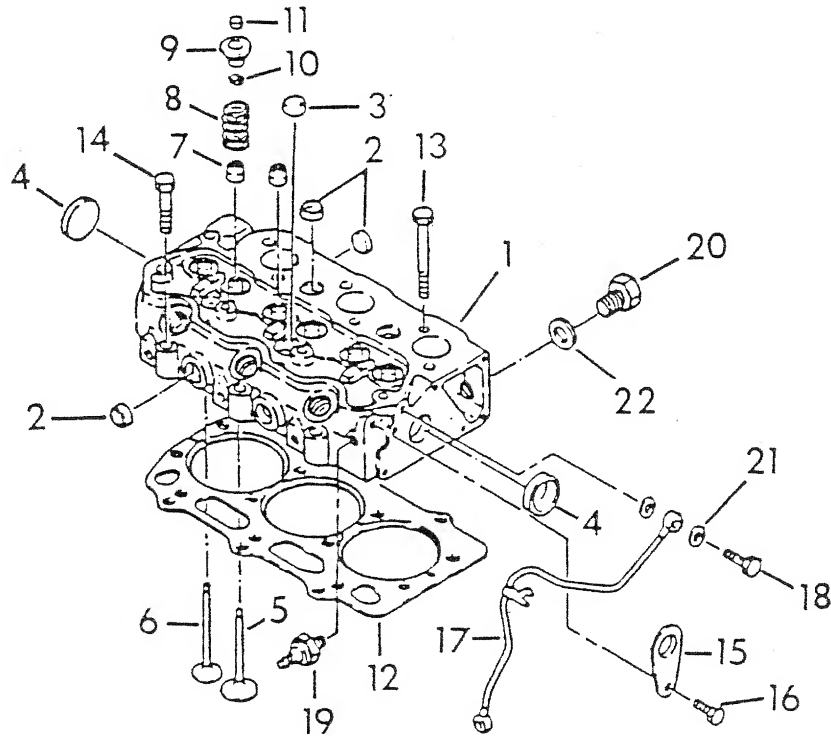

ITEM	PART NO.	QTY.	DESCRIPTION
1	147-70939	1	Cylinder Head Assembly
2	148-70939	6	Expansion Plug
3	447-70939	3	Expansion Plug
4	149-70939	2	Expansion Plug
5	150-70939	3	Intake Valve
6	151-70939	3	Exhaust Valve
7	152-70939	3	Valve Guide Seal (Exhaust)
	153-70939	3	Valve Guide Seal (Intake)
8	154-70939	6	Spring
9	155-70939	6	Retainer
10	156-70939	12	Key
11	157-70939	6	Cap
12	158-70939	1	Cylinder Head Gasket, 1.2mm thick
	159-70939	1	Cylinder Head Gasket, 1.3mm thick
13	160-70939	11	Bolt
14	161-70939	3	Bolt
15	162-70939	2	Lifting Eye
16	163-70939	2	Bolt
17	164-70939	1	Tubing
18	165-70939	2	Bolt
19	60108	1	Oil Switch
20	167-70939	1	Thermo-Switch
21	168-70939	4	Gasket
22	169-70939	1	Washer

# EXPLODED VIEW — CAM SHAFT


Drawing No. 75677

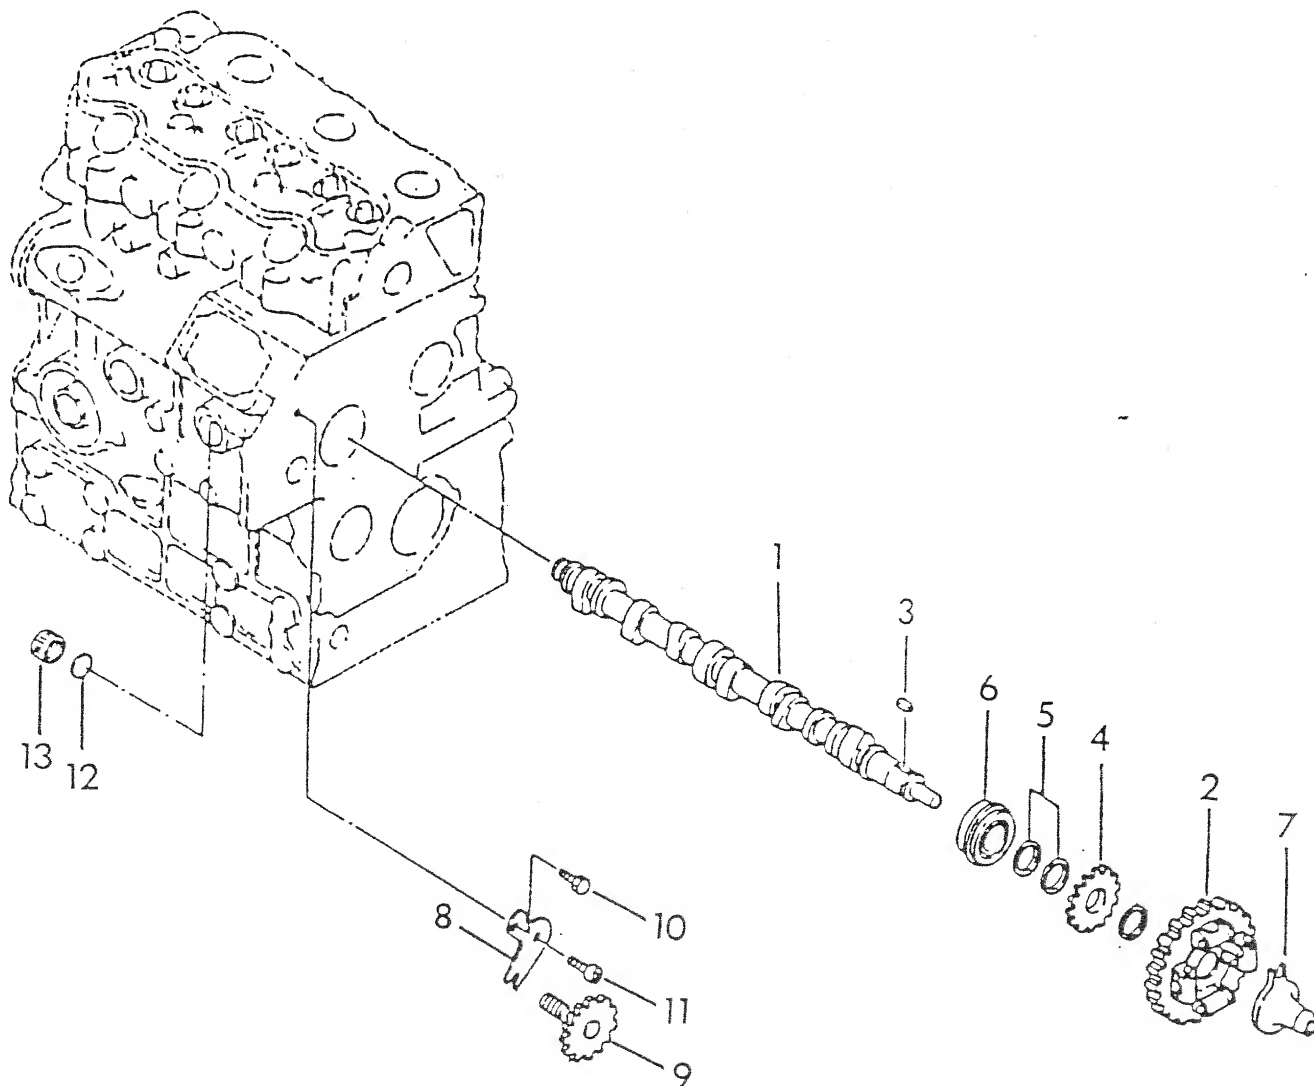

ITEM	PART NO.	QTY.	DESCRIPTION
1	232-70939	1	Camshaft Assembly
2	233-70939	1	Camshaft Gear
3	195-70939	1	Key
4	234-70939	1	Gear
5	235-70939	3	Spacer
6	236-70939	1	Ball Bearing
7	237-70939	1	Slider
8	238-70939	1	Plate
9	239-70939	1	Tachometer Shaft
10	240-70939	1	Bolt
11	241-70939	1	Bolt
12	242-70939	1	Gasket
13	243-70939	1	Nut

# EXPLODED VIEW — CYLINDER BLOCK

Drawing No. 75676

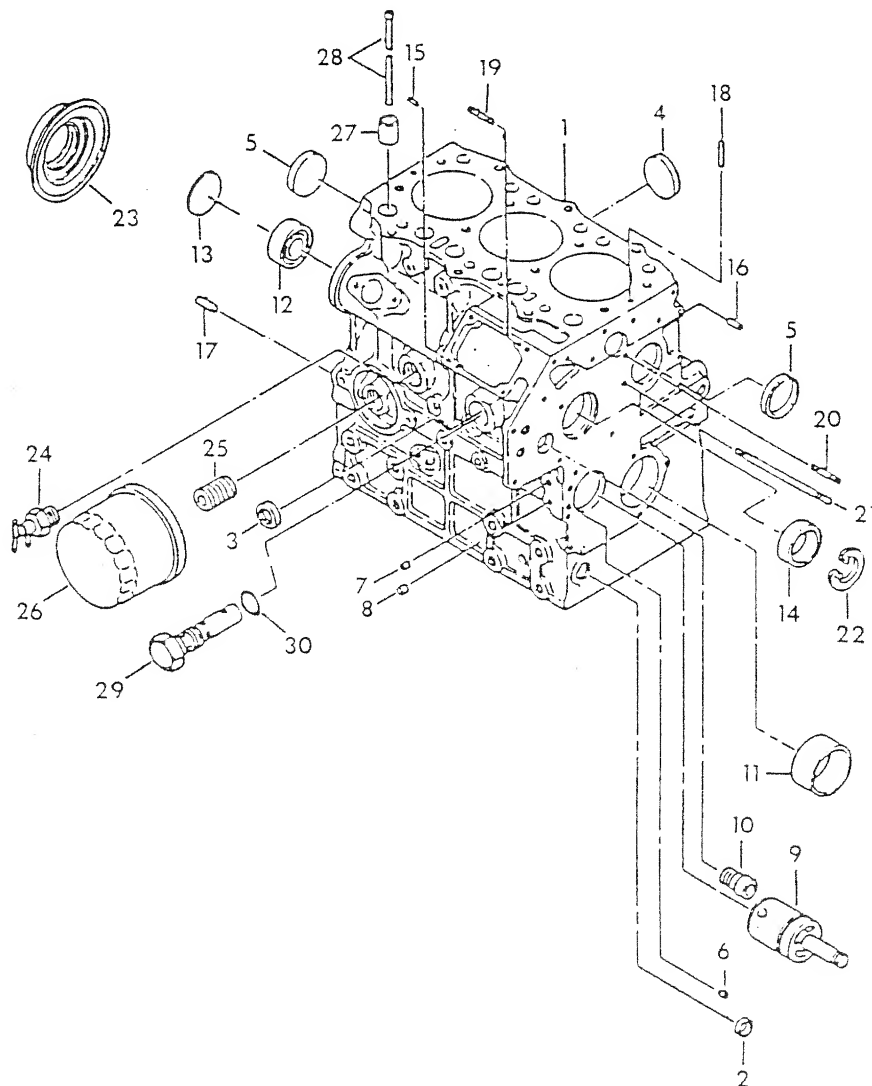


ITEM	PART NO.	QTY.	DESCRIPTION	ITEM	PART NO.	QTY.	DESCRIPTION
1	100-70939	1	Complete Cylinder Block	17	117-70939	2	Dowel Pin
2	447-70939	1	Expansion Plug	18	118-70939	2	Spring Pin
3	101-70939	1	Expansion Plug	19	119-70939	2	Stud
4	102-70939	2	Expansion Plug	20	120-70939	1	Stud
5	103-70939	2	Expansion Plug	21	121-70939	1	Stud
6	104-70939	1	Expansion Plug	22	131-70939	1	Snap Ring
7	105-70939	4	Plug	23	123-70939	1	Oil Seal
8	106-70939	4	Plug	24	124-70939	1	Drain Cock
9	107-70939	1	Idle Gear Shaft	25	125-70939	1	Connector
10	108-70939	1	Bushing	26	126-70939	1	Oil Filter
11	109-70939	1	Bushing — Standard	27	127-70939	6	Tappet
	110-70939	1	0.25mm U.S. Bushing	28	128-70939	6	Push Rod
	111-70939	1	0.50mm U.S. Bushing	29	129-70939	1	Relief Valve
12	112-70939	1	Ball Bearing	30	130-70939	1	O-ring
13	113-70939	1	Expansion Plug				
14	114-70939	1	Ball Bearing				
15	115-70939	2	Dowel Pin				
16	116-70939	2	Dowel Pin				

mm = millimeter  
U.S. = Undersize

# EXPLODED VIEW — OIL PUMP COMPONENTS

Drawing No. 75682

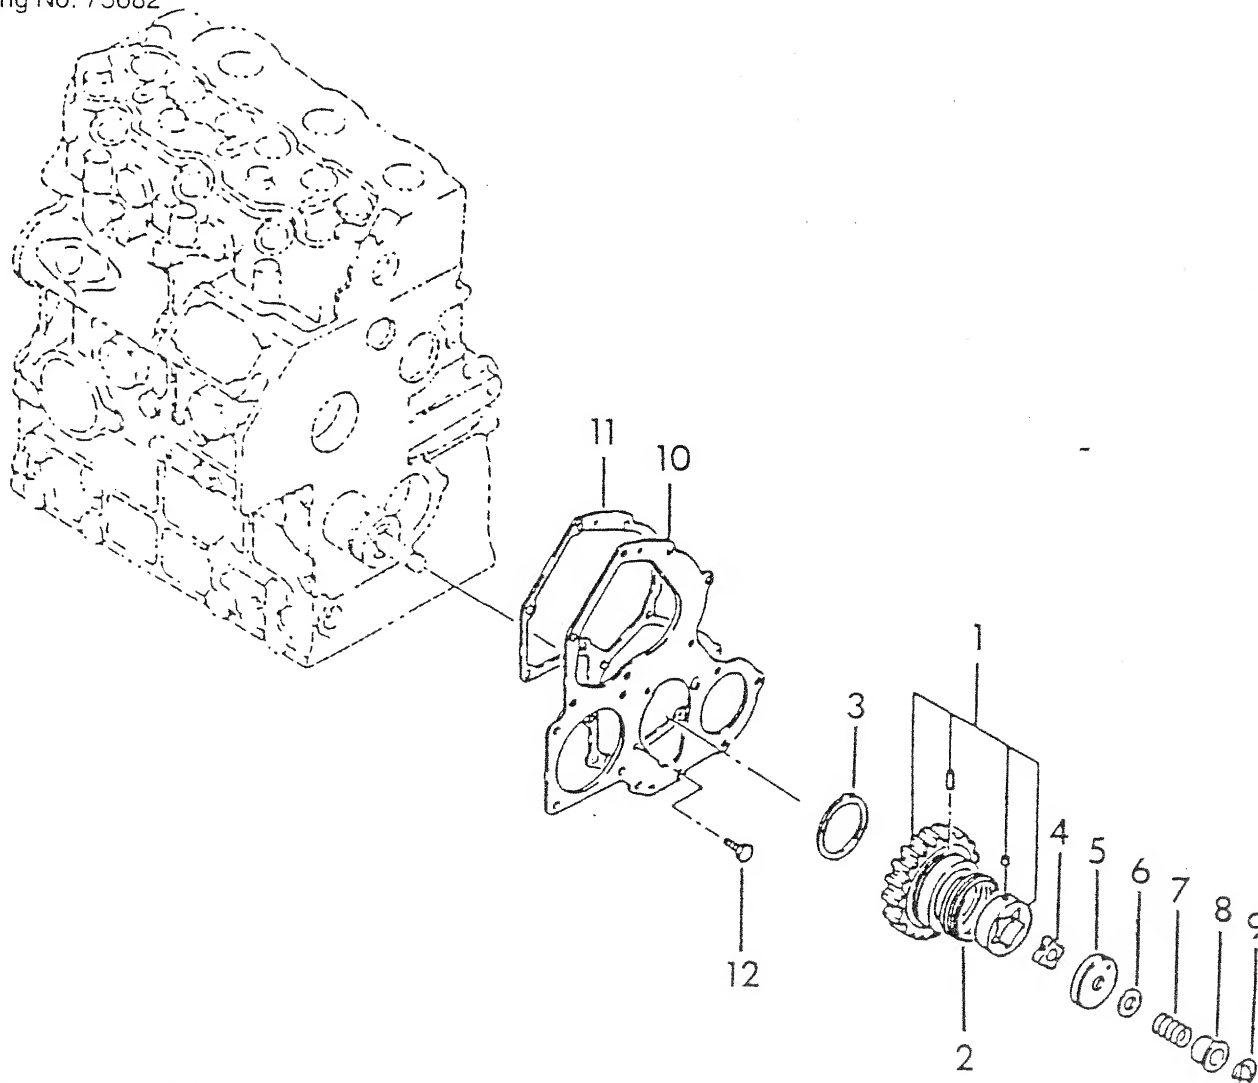


ITEM	PART NO.	QTY.	DESCRIPTION
1	250-70939	1	Idler Gear Assembly
2	252-70939	1	Spring
3	251-70939	1	Thrust Washer
4	253-70939	1	Rotor
5	254-70939	1	Oil Pump Cover
6	255-70939	AR	0.1mm Shim
	531-70939	AR	0.15mm Shim
	532-70939	AR	0.2mm Shim
	258-70939	AR	0.50mm Shim
7	259-70939	1	Spring
8	260-70939	1	Collar
9	261-70939	1	Snap Ring
10	262-70939	1	Front Plate
11	263-70939	1	Gasket
12	264-70939	3	Bolt

AR — AS REQUIRED

# EXPLODED VIEW — ROCKER ARM ASSEMBLY


Drawing No. 75683

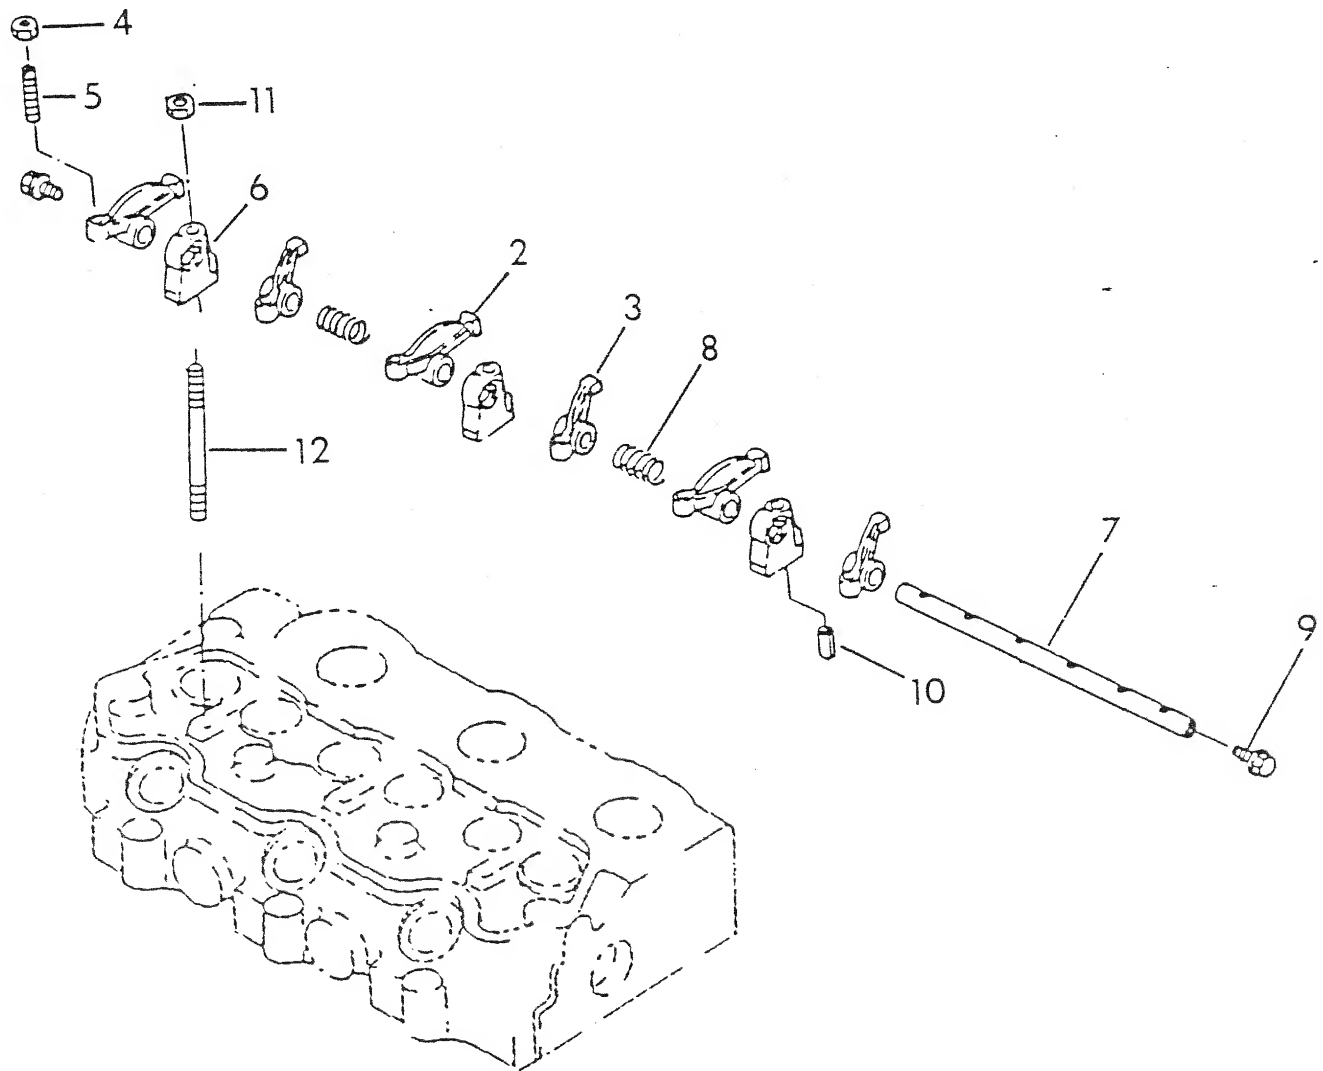

ITEM	PART NO.	QTY.	DESCRIPTION
1	170-70939	1	Rocker Arm Assembly
2	171-70939	3	Intake Rocker Arm
3	172-70939	3	Exhaust Rocker Arm
4	174-70939	6	Nut
5	173-70939	6	Stud
6	175-70939	3	Rocker Arm Bracket
7	176-70939	1	Rocker Arm Shaft
8	177-70939	2	Spring
9	178-70939	2	Screw
10	179-70939	1	Spring Pin
11	180-70939	3	Nut
12	181-70939	3	Stud

# EXPLODED VIEW — FUEL SUPPLY


Drawing No. 75693

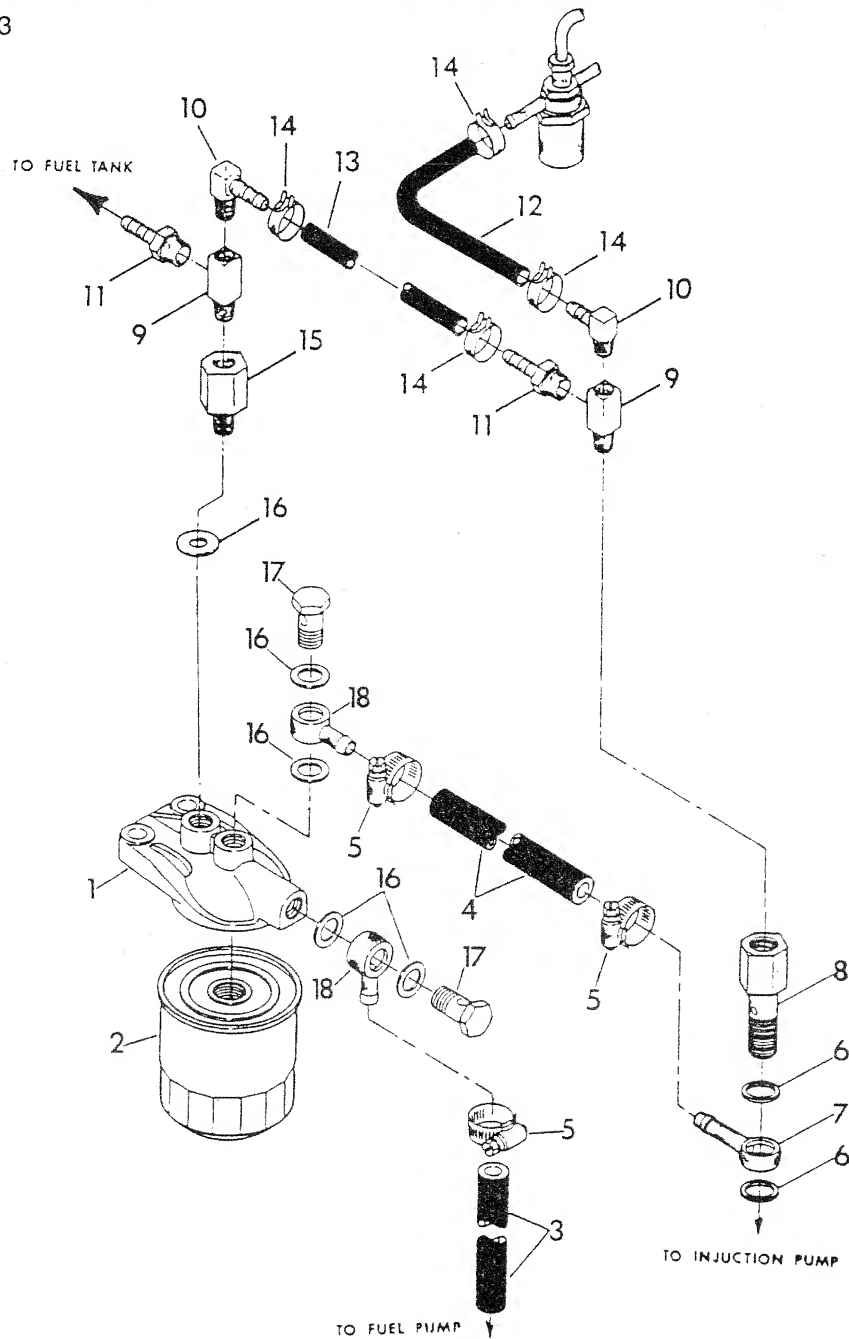

ITEM	PART NO.	QTY.	DESCRIPTION	ITEM	PART NO.	QTY.	DESCRIPTION
1	661-70939	1	Fuel Filter Support	11	30096	2	1/8" NPT x 3/16" Barbed Straight Fitting
2	69858	1	Fuel Filter	12	68736	1	3/16" dia. x 1/2" Hose
3	47290	1	3/8" dia. x 12-1/2" Hose	13	68736	1	3/16" dia. x 7-3/4" Hose
4	52221	1	5/16" dia. x 6-1/2" Hose	14	74823	4	Clamp
5	40173	4	No. 5.5 Hose Clamp	15	74819	1	Fuel Bleed Fitting
6	378-70939	2	Gasket	16	651-70939	5	Fuel Bleed Gasket
7	379-70939	1	Banjo Fitting	17	662-70939	2	Hollow Bolt
8	74808	1	Fuel Bleed Fitting	18	663-70939	2	Banjo Type Fitting
9	52233	2	1/8" NPT Tee (brass)				
10	39450	2	1/8" NPT x 3/16" 90-degree Barbed Fitting				

# EXPLODED VIEW — WATER PUMP

Drawing No. 82962

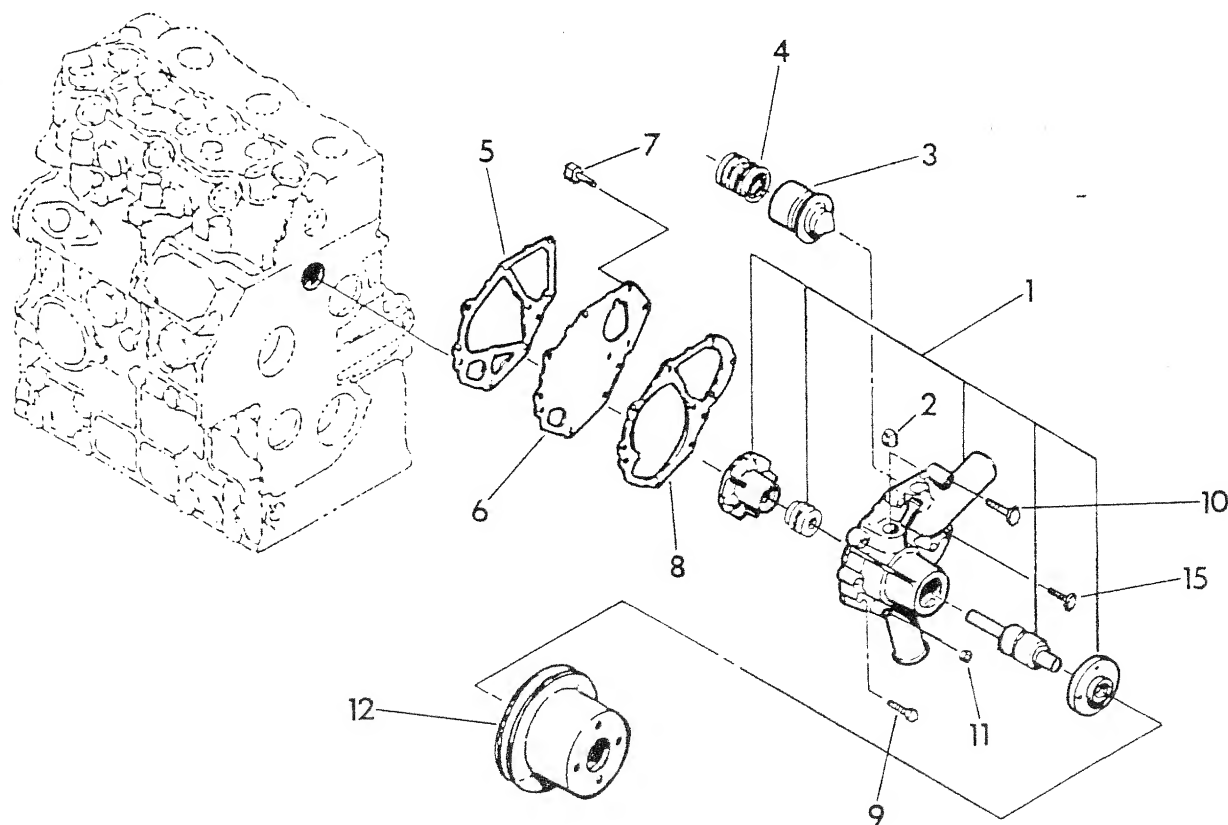


ITEM	PART NO.	QTY.	DESCRIPTION
1	265-70939	1	Water Pump Assembly
2	266-70939	1	Plug
3	267-70939	1	Thermostat
4	268-70939	1	Spring
5	269-70939	3	Gasket
6	270-70939	1	Set Plate
7	271-70939	1	Bolt
8	272-70939	1	Gasket
9	273-70939	1	Bolt
10	274-70939	1	Bolt
11	275-70939	1	Nut
12	247-70939	1	Pulley
15	284-70939	1	Bolt



# EXPLODED VIEW — INJECTOR PUMP

Drawing No. 75686

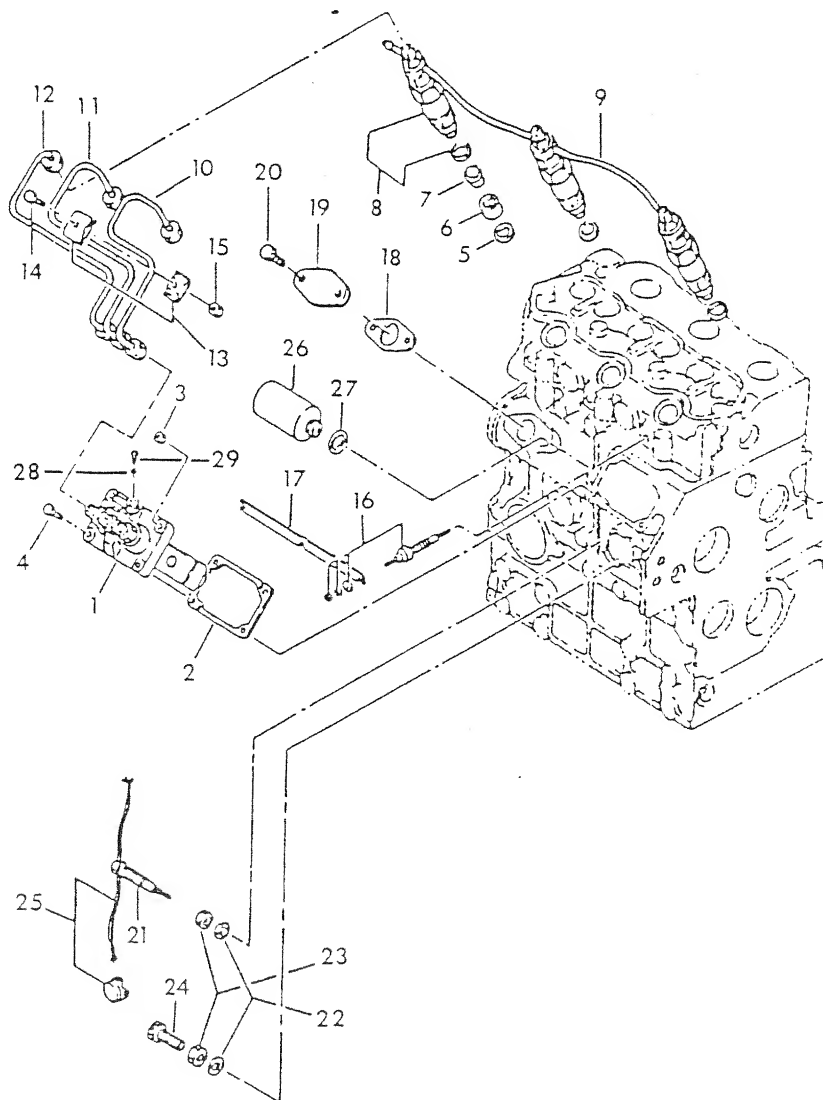


ITEM	PART NO.	QTY.	DESCRIPTION
1	316-70939	1	Injector Pump Assembly
2	317-70939	AR	0.2mm Shim
	318-70939	AR	0.3mm Shim
	319-70939	AR	0.5mm Shim
	320-70939	AR	1.0mm Shim
3	298-70939	2	Nut
4	321-70939	2	Bolt
5	322-70939	3	Gasket
6	323-70939	3	Insert
7	324-70939	3	Cap
8	325-70939	3	Injector
9	326-70939	1	Tubing
10	327-70939	1	Tubing
11	328-70939	1	Tubing
12	329-70939	1	Tubing
13	330-70939	1	Clamp
14	331-70939	1	Bolt

ITEM	PART NO.	QTY.	DESCRIPTION
15	298-70939	1	Nut
16	332-70939	3	Glow Plug
17	333-70939	1	Connector
18	334-70939	1	Gasket
19	335-70939	1	Cover
20	264-70939	2	Bolt
21	336-70939	1	Sensor
22	337-70939	2	Washer
23	338-70939	2	Nut
24	339-70939	1	Bolt
25	240-70939	1	Lock Wire
26	341-70939	1	Solenoid
27	342-70939	1	Washer
28	343-70939	1	Washer
29	344-70939	1	Screw

AR — AS REQUIRED

# EXPLODED VIEW — TIMING GEAR HOUSING AND GOVERNOR


Drawing No. 82067

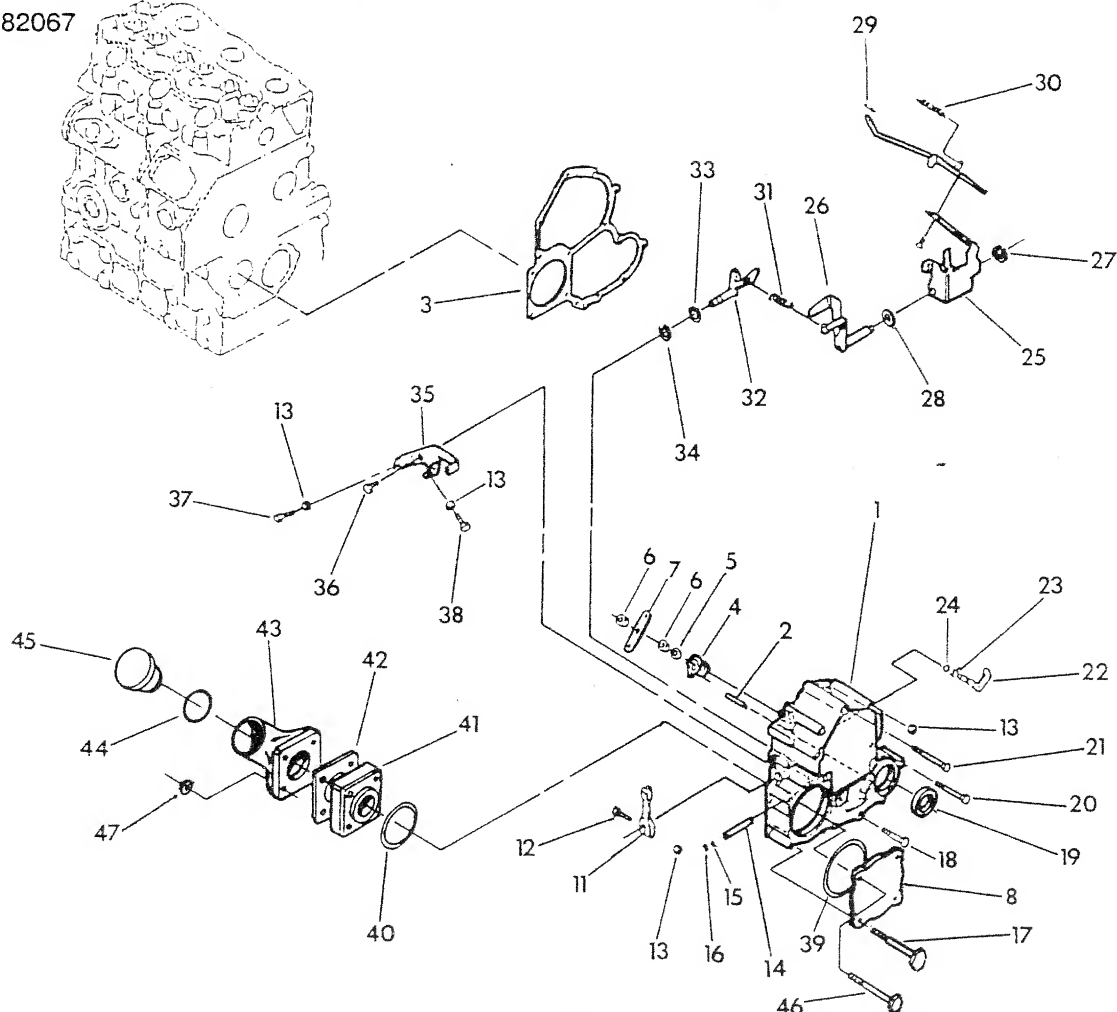

ITEM	PART NO.	QTY.	DESCRIPTION	ITEM	PART NO.	QTY.	DESCRIPTION
1	285-70939	1	Timing Gear Housing	25	289-70939	1	Governor Lever Assembly
2	286-70939	1	Spring Pin	26	290-70939	1	Tension Lever
3	287-70939	1	Gasket	27	291-70939	1	Snap Ring
4	307-70939	1	Spring	28	136-70939	1	Washer
5	308-70939	1	Washer	29	292-70939	1	Cotter Pin
6	309-70939	2	Nut	30	313-70939	1	Spring
7	310-70939	1	Stop Lever	31	293-70939	1	Spring
8	314-70939	2	Cover	32	294-70939	1	Arm
9	315-70939	1	Gasket	33	295-70939	1	O-Ring
10	180-70939	4	Nut	34	291-70939	1	Snap Ring
11	296-70939	1	Governor Lever	35	302-70939	1	Bracket
12	297-70939	1	Bolt	36	271-70939	3	Bolt
13	298-70939	4	Nut	37	303-70939	2	Bolt
14	299-70939	1	Shaft	38	71944	1	Screw
15	300-70939	1	O-Ring	39	660-70939	1	O-Ring
16	301-70939	1	Snap Ring	40	534-70939	1	O-Ring
17	540-70939	3	Bolt	41	535-70939	1	Spacer
18	282-70939	5	Bolt	42	536-70939	1	Gasket
19	288-70939	1	Oil Seal	43	537-70939	1	Holder
20	274-70939	4	Bolt	44	539-70939	1	O-Ring
21	311-70939	5	Bolt	45	188-70939	1	Cap
22	304-70939	1	Arm	46	541-70939	1	Bolt
23	305-70939	1	Snap Ring	47	538-70939	3	Nut
24	306-70939	1	O-Ring				

# EXPLODED VIEW — RADIATOR


Drawing No. 83294

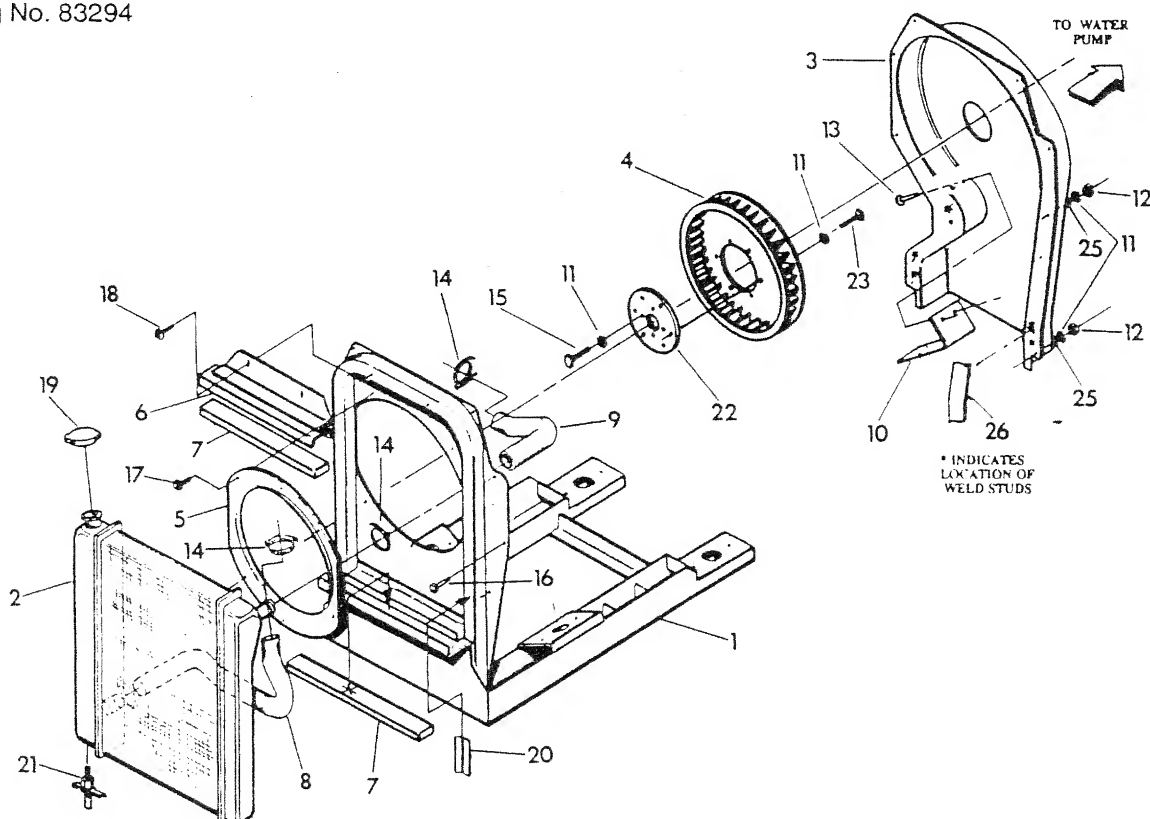

ITEM	PART NO.	QTY.	DESCRIPTION
1	83098	1	ASSEMBLY, BASE
2	83057	1	RADIATOR, CROSS FLOW
3	80245	1	BLOWER HOUSING
4	81905	1	FAN, ENGINE
5	82603	1	RING, FAN INLET
6	83058	1	BRACKET, RADIATOR MOUNTING
7	81977-A	2	FOAM PAD
8	81947	1	HOSE, LOWER RADIATOR
9	81946	1	HOSE, UPPER RADIATOR
10	82605	1	PLATE, BLOWER HOUSING
11	22097	15	LOCK WASHER — M6
12	49813	11	NUT, HEX — M6-1.0
13	66831	2	RIVET, POP
14	35586	4	CLAMP (WORM TYPE)
15	45757	4	CAPSCREW, HEX HEAD — M6-1.0 x 25mm
16	42568	7	CAPSCREW, HEX HEAD — M6-1.0 x 20mm
17	56892	6	CRIMPTITE, No. 10-32 x 3/8"
18	58442	2	CRIMPTITE, 1/4"-20 x 1/2"
19	46627	1	CAP, RADIATOR
20	52250	5 ft.	FOAM PAD — 3/4" x 1" WIDE
21	50832	1	DRAIN COCK — V8 NPT
22	81976	1	HUB, FAN
23	51787	6	CAPSCREW, HEX HEAD — M4-0.7 x 16mm
24	22152	6	LOCK WASHER — M4
25	22473	11	FLAT WASHER — M6
26	29451	5 ft.	FOAM TAPE — 1/8" x 1/2"

# EXPLODED VIEW — D-C ALTERNATOR


Drawing No. 75685

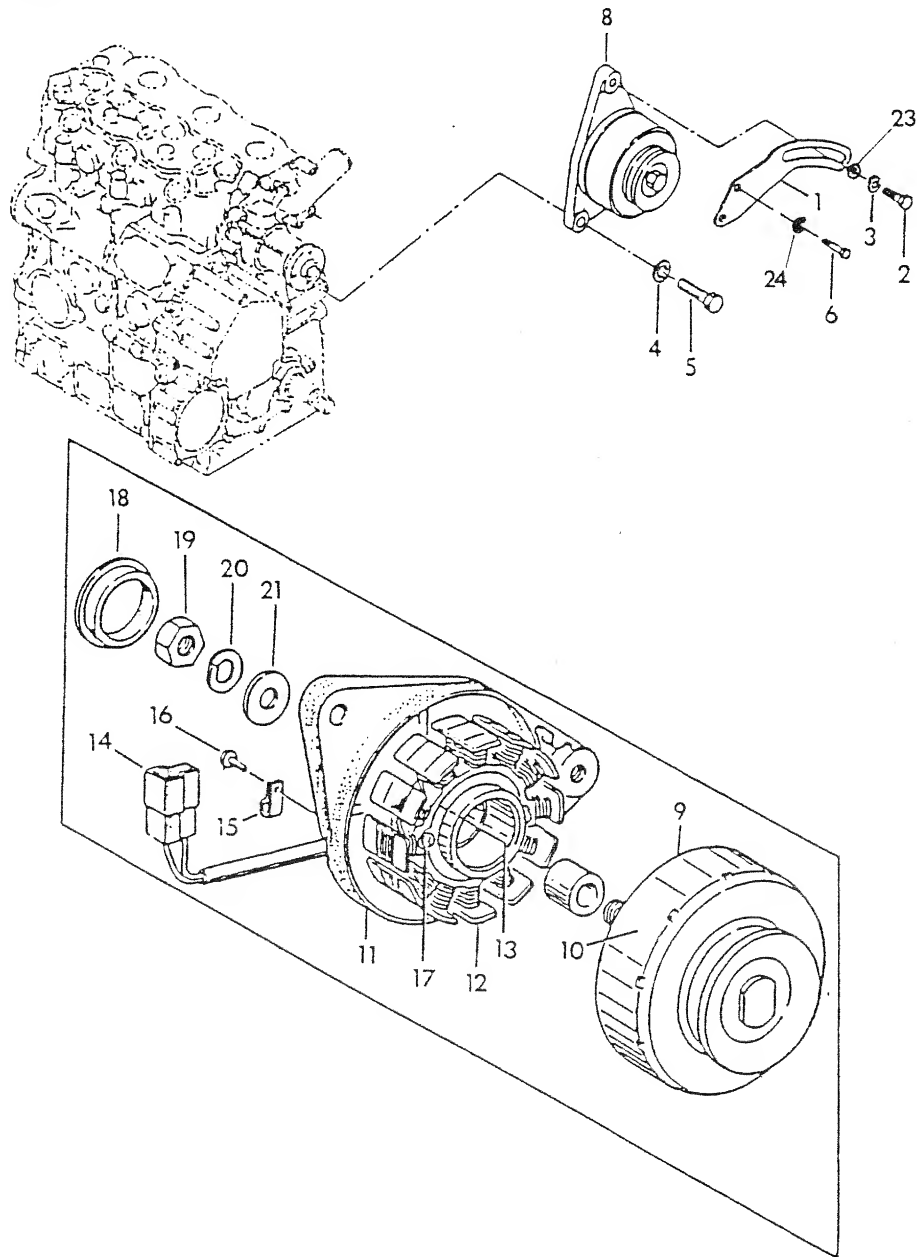

ITEM	PART NO.	QTY.	DESCRIPTION	ITEM	PART NO.	QTY.	DESCRIPTION
1	77909	1	Adjusting Plate	13	349-70939	1	Bearing
2	74829	1	M8-1.25 x 30mm Bolt	14	352-70939	1	Coupler
3	72545	1	Lock Washer	15	353-70939	1	Clamp
4	74007	1	M10 Flat Washer	16	354-70939	1	Screw
5	74069	1	M10-1.5 x 40mm Capscrew	17	355-70939	2	Screw
6	51753	2	M6-1.0 x 40mm Bolt	18	350-70939	1	Cap
8	277-70939	1	Alternator Assembly	19	351-70939	1	Nut
9	345-70939	1	Flywheel	20	137-70939	1	Lock Washer
10	349-70939	1	Bearing	21	280-70939	1	Washer
11	346-70939	1	Plate Assembly	22	356-70939	1	Collar
12	348-70939	1	Stator	23	74827	1	M8 Flat Washer
				24	70005	2	M6 Lock Washer

# EXPLODED VIEW — CONTROL BOX

Drawing No. 83699

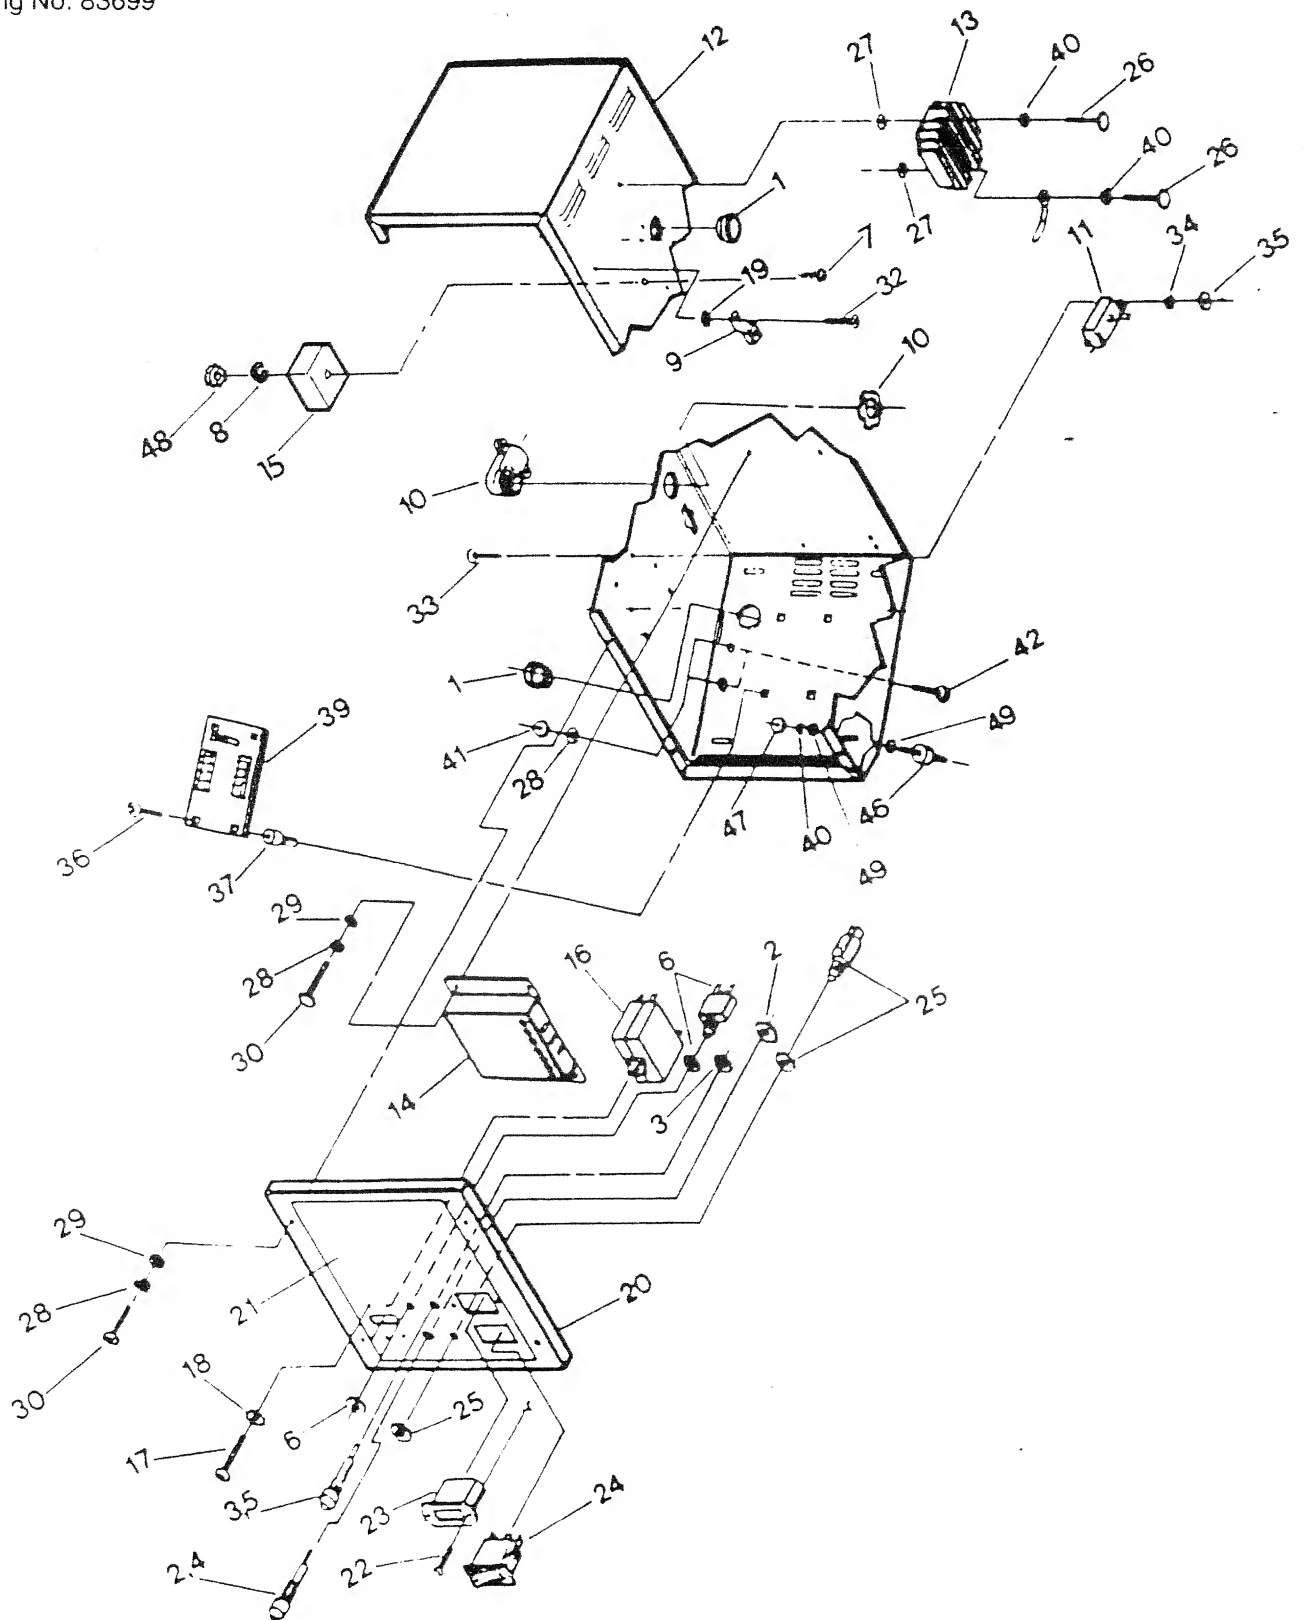

# REPAIR PARTS LIST — CONTROL BOX


Drawing No. 83699

ITEM	PART NO.	QTY.	DESCRIPTION
1	23484-F	2	SB-1000-12 Snap Bushing
2	32300	1	30-amp AGC Fuse Holder
3	81904	1	14-amp SFE Fues Holder
4	22668	1	30-amp AGC Fuse
5	55927	1	14-amp SFE Fuse
6	75207-B	1	10-amp DC Circuit Breaker
7	22220	1	No. 6 x 7/8" long Round Head Machine Screw
8	22155	1	No. 6 Lock Washer
9	25433	1	No. 6-No. 14 AWG Solderless Lug
10	39271	1	3/4" Greenlee, 90-degree Conduit Clamp
11	48512	1	5-amp Circuit Breaker
12	81903	1	Control Box
13	71938-A	1	DC Regulator
14	67680	1	AC Regulator Assembly
15	83635	1	AC Transformer
16	74969	1	35-amp Circuit Breaker
17	36900	4	No. 6-32 x 1/4" Phillips Pan Head Machine Screw
18	22155	4	No. 6 Lock Washer
19	23762	1	No. 10 External Lock Washer
20	81902	1	Control Panel
21	81884-D	1	Control Panel Decal
22	74076	2	M3-0.5 x 10mm Pan Head Machine Screw
23	77604	1	Hour Meter
24	75208	1	Start/Stop Switch
25	55920	1	Preheat Switch
26	42568	2	M6-1.0 x 20mm Hex Head Capscrew
27	26850	2	M6 External Lock Washer
28	22152	10	M5 Lock Washer
29	23897	8	M5 Flat Washer
30	45770	8	M5-0.8 x 10mm Hex Head Capscrew
31	*77744	1	Customer Leads
32	74041	1	M5-0.8 x 20mm Phillips Pan Head Machine Screw
33	51718	2	M4-0.7 x 10mm Pan Head Machine Screw
34	43184	2	M4 Lock Washer
35	51715	2	M4-0.7 Hex Nut
36	80882	4	No. 6 x 5/8" Self-tapping Screw
37	72566	4	Spacer Nut
39	70325	1	Engine Controller Assembly
40	22097	6	M6 Lock Washer
41	51716	2	M5 Hex Nut
42	55440	2	M5-0.8 x 25mm Hex Head Capscrew
44	*82617	1	Panel Wire Harness
45	*81951	1	Engine Wire Harness
46	82737	4	Vibration Dampener
47	49813	4	M6-1.0 Nut
48	22188	1	No. 6 Hex Nut
49	22473	8	M6 Flat Washer

\* NOT SHOWN

# EXPLODED VIEW — GENERATOR

Drawing No. 81983

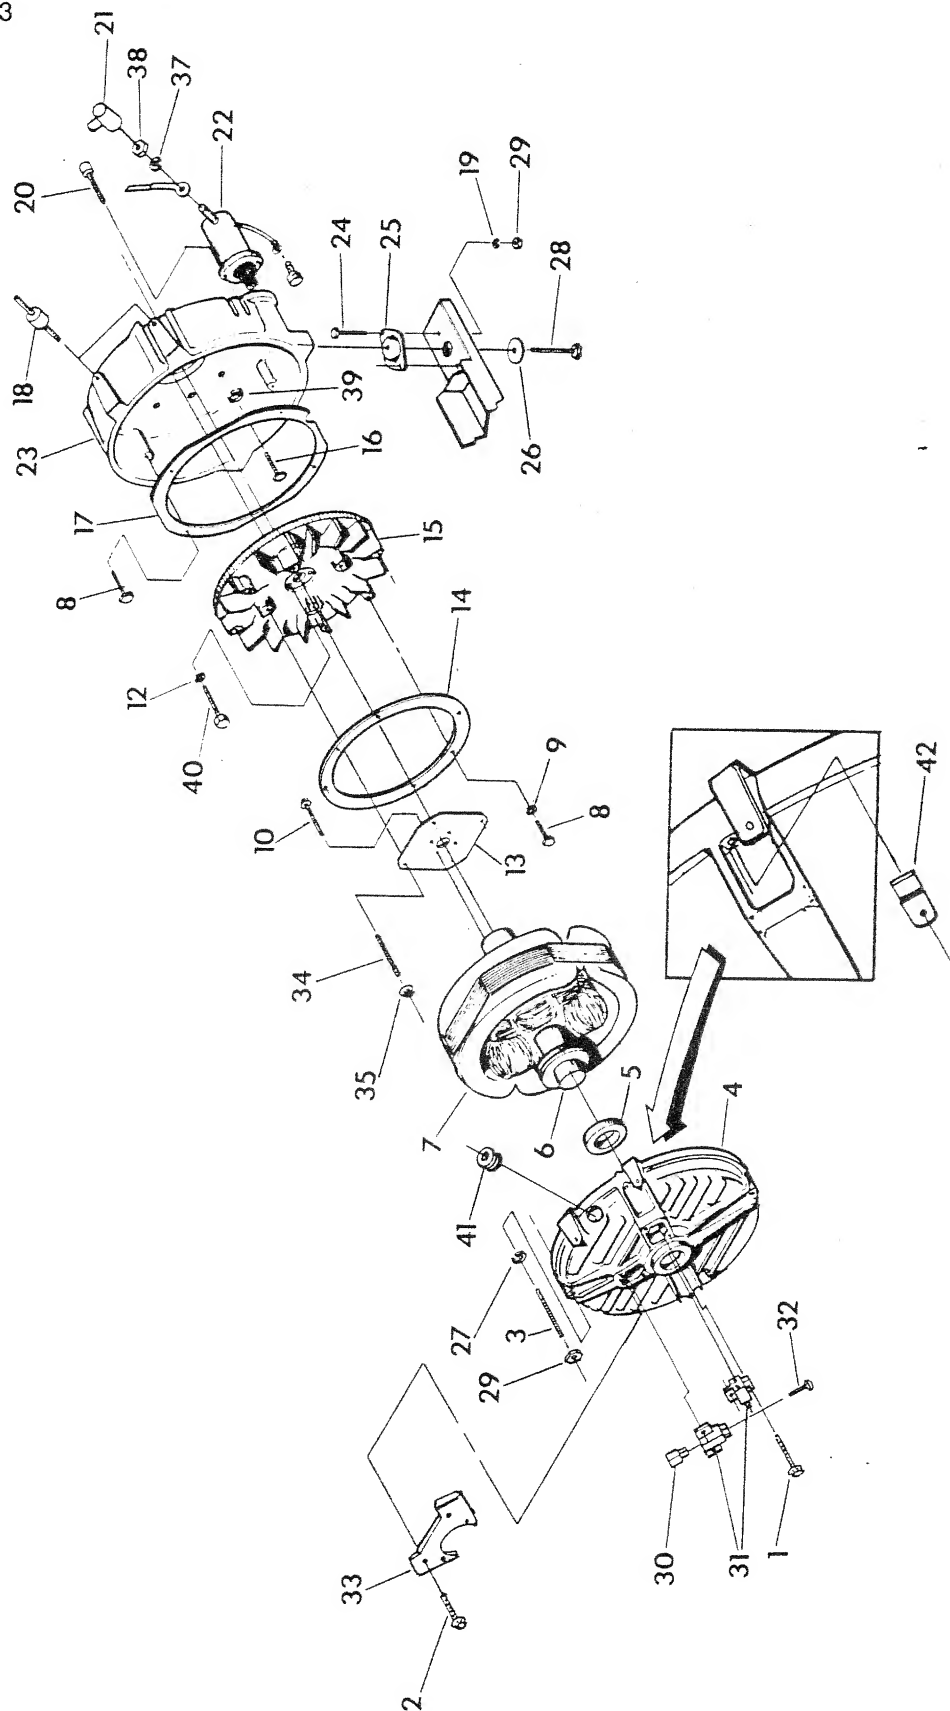



# REPAIR PARTS LIST — GENERATOR

Drawing No. 81983

ITEM	PART NO.	QTY.	DESCRIPTION
1	24488	4	No. 8 x 5/8" Taptite Screw
2	24911	4	No. 8 x 3/8" Taptite Screw
3	BN45761	4	M8-1.25 x 160mm Stud
4	81931	1	15" RV Rear Bearing Carrier
5	47248	1	45M Ball Bearing
6	81956	1	15" RV, 2.5L ASM Rotor
7	81955	1	15" RV, 2.5L ASM Stator
8	45770	10	M5-0.8 x 10mm Hex Head Capscrew
9	22152	6	No. 10 Lock Washer
10	81974	4	M8 x 20mm Hex Flange Bolt
11	74066	4	M10-1.25 x 30mm Hex Screw
12	22302	4	M10 Lock Washer
13	81952	1	15" RV, 15M Flex Plate
14	81900	1	Ring Fan
15	81192	1	15" ISM Flywheel Mach.
16	42911	4	M10-1.5 x 30mm Hex Head Capscrew
17	81901	1	Air Ring Baffle
18	82737	4	Vibration Mount
19	22145	4	5/16-M8 Flat Washer
20	59450	2	5/16-18 x 1-1/4" Hex Head Capscrew
21	75763	1	Battery Cable Boot
22	70954	1	Starter Motor
23	81929	1	15", ISM 1L Engine Adaptor
24	39253	4	M8-1.25 x 20mm Hex Head Capscrew
25	70936	2	Vibration Isolator
26	71956	2	5/16-M8 Flat Washer
27	22129	8	5/16-M8 Lock Washer
28	72553	2	M8-1.25 x 60mm Hex Head Screw
29	45771	8	M8-1.25 Hex Nut
30	A-24044-A	4	Brush
31	23877-D	2	Brush Holder
32	25105	4	No. 6-32 x 1/4" SIMS
33	82626	1	Brush Cover
34	BM45761	4	M8-1.25 x 30mm Stud
35	52858	4	M8-1.25 Hex Nut Flange
36	81991	1	Red Wire Assembly
37	22097	1	1/4" Lock Washer
38	22127	1	1/4-20 Hex Nut
39	22237	4	M10 Lock Washer
40	42909	2	M8-1.25 x 30mm Hex Head Capscrew
41	29107	1	Rubber Grommet
42	25155	1	Clamp

## NOTES

---

# ELECTRICAL FORMULAS

TO FIND	KNOWN VALUES	1-PHASE	3-PHASE
KILOWATTS (kW)	Volts, Current, Power Factor	$\frac{E \times I}{1000}$	$\frac{E \times I \times 1.73 \times PF}{1000}$
KVA	Volts, Current	$\frac{E \times I}{1000}$	$\frac{E \times I \times 1.73}{1000}$
AMPERES	kW, Volts, Power Factor	$\frac{kW \times 1000}{E}$	$\frac{kW \times 1000}{E \times 1.73 \times PF}$
WATTS	Volts, Amps, Power Factor	Volts x Amps	$E \times I \times 1.73 \times PF$
NO. OF ROTOR POLES	Frequency, RPM	$\frac{2 \times 60 \times \text{Frequency}}{\text{RPM}}$	$\frac{2 \times 60 \times \text{Frequency}}{\text{RPM}}$
FREQUENCY	RPM, No. of Rotor Poles	$\frac{\text{RPM} \times \text{Poles}}{2 \times 60}$	$\frac{\text{RPM} \times \text{Poles}}{2 \times 60}$
RPM	Frequency, No. of Rotor Poles	$\frac{2 \times 60 \times \text{Frequency}}{\text{Rotor Poles}}$	$\frac{2 \times 60 \times \text{Frequency}}{\text{Rotor Poles}}$
kW (required for Motor)	Motor Horsepower, Efficiency	$\frac{HP \times 0.746}{\text{Efficiency}}$	$\frac{HP \times 0.746}{\text{Efficiency}}$
RESISTANCE	Volts, Amperes	$\frac{E}{I}$	$\frac{E}{I}$
VOLTS	Ohm, Amperes	$I \times R$	$I \times R$
AMPERES	Ohms, Volts	$\frac{E}{R}$	$\frac{E}{R}$

E = VOLTS

I = AMPERES

R = RESISTANCE (OHMS)

PF = POWER FACTOR

## **GENERAC'S 3-YEAR LIMITED WARRANTY**

### **FOR NP SERIES RECREATIONAL VEHICLE GENERATORS**

Generac warrants to the original purchaser that its generators will be free from defects in materials or workmanship for the period set forth below from date of original purchase. During said warranty period, Generac will, at its option, repair or replace any part which, upon examination by Generac or Generac Authorized Distributors and/or Dealers, is found to be defective under normal use and service.

#### **3-YEAR WARRANTY SCHEDULE**

1. All NP Series generators used in a recreational vehicle shall be warranted from date of purchase for a period of three (3) years or 2000 hours of operation, whichever occurs first. All parts, labor, removal and reinstallation shall be covered for the first two years. Parts and labor on selected generator and engine parts shall be covered during the third year or 2000 hours.
2. The drive train, belt and pulleys on NP series air-cooled generators shall be warranted against failure due to defective materials or normal usage for the life of the generator. For the original owner, this drive train warranty shall include parts and labor plus a \$50.00 payment upon return of the failed belt or pulley by the original owner. For succeeding owners, this power train warranty shall cover belt or pulley parts only.
3. Rental units, demonstrators or commercial applications, such as construction or utility, are warranted for one year or 2000 hours, whichever comes first.

All warranty expense allowances are subject to the conditions defined in the published "GENERAC POLICIES AND PROCEDURES" manual.

#### **THIS WARRANTY DOES NOT COVER:**

- Costs of maintenance, installation and startup.
- Failures due to normal wear, accident, misuse, abuse, negligence or improper installation.
- Products which are modified or altered in a manner not authorized by the manufacturer in writing.
- Incidental, consequential or indirect damages caused by defects in materials or workmanship, or any delay in repair or replacement of defective parts.
- Failure due to misapplication.
- Telephone, telegraph, teletype or other communications expenses.
- Living or travel expenses of persons performing service.
- All transportation/travel expenses.
- Rental equipment used while warranty repairs are being performed.
- Overtime labor.
- Starting batteries, fuses, light bulbs and engine fluids.

THIS WARRANTY IS IN PLACE OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. SPECIFICALLY, GENERAC MAKES NO OTHER WARRANTIES AS TO MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. GENERAC'S ONLY LIABILITY SHALL BE THE REPAIR OR REPLACEMENT OF PARTS AS STATED ABOVE. IN NO EVENT SHALL GENERAC BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES, EVEN IF SUCH DAMAGES ARE A RESULT OF GENERAC'S NEGLIGENCE. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you. Buyer agrees to make no claims against generac based on negligence.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

**GENERAC CORPORATION, P.O. Box 8, Hwy 59 and Hillside Road, Waukesha, WI 53187**

**Telephone (414) 544-4811**

**FAX (414) 544-4851**